
Tanaka.

Parts Catalog

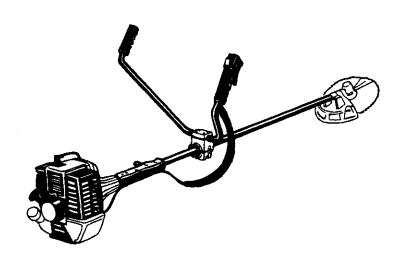


Brush Cutter

Model: TBC-322

Part # 10864 04-15-98

FIG. 1 ENGINE

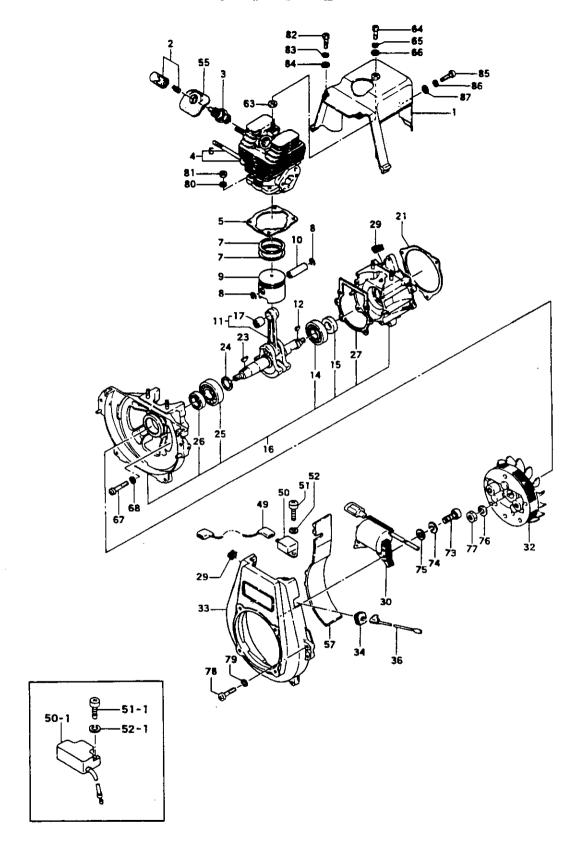

	 	1 BC-322 F1					
REF.	PART NO.	PART DESCRIPTION	Q	C	S	SERIAL NO.	REMARKS
1	016-01300-210	SHROUD,CYLINDER	1	_	D		
2	157-01570-900	CAP,SPARK PLUG,ASS'Y	1		C		
3	018-02233-200	PLUG,SPARK	1		D		
4	002-01320-800	CYLINDER	1		D		
5	017-01300-210	GASKET,CYLINDER	1		С		
6	100-01300-202	BOLT,STUD 6X9	2		D		
7	041-01000-201	RING,PISTON,LOWER	2		В		
8	039-00000-201	CIRCLIP, PISTON PIN	2		Α		
9	031-01400-204	PISTON	1		С		
10	037-01400-200	PIN,PISTON	1		С		
1 1	046-01360-821	CRANKSHAFT	1		٦		
	i	KEY,WOODRUFF,3X10X3.7	1		В		
'-	000 00000 200		Ι΄				
14	999-61600-200	BEARING,BALL,#6002	1		В		
j i	i	SEAL,OIL,#12227			A		
1	072-01370-901	CRANKCASE,ASS'Y	;		ם D		Includes bearings, seals & gasket
1		BEARING, NEEDLE, F-910	¦		٥		includes bearings, seals & gasket
	810-01225-201	GASKET,RECOIL STARTER,A	1		ם		
	ł .				C		
23	006-10100-200	KEY,WOODRUFF,3X13X4.5	'		١٢	;	
24	071-02007-200	SHIM,15.2X20X.05	V		D		
		SHIM, 15.2X20X.15	v		D		Shims are "as needed" to obtain
1			V		ם		correct c/s side clearance.
1 1		SHIM,16X21X.20	ľ				correct c/s side clearance.
		SHIM,16X21X.30	ľ		D B		
	999-66152-511	BEARING,BALL,#6202	1		i . I		
20		SEAL,OIL,#VE15X25X7	! '		Α		
07	000 01000 00	OACKET ODANIKOASE	_		_	1	
	090-01300-20	GASKET, CRANKCASE	1		D		
	203-06000-200	GROMMET, PRIMARY CORD	2		C		
30	167-21509-802]		С	•	
1 1	155-21703-802	ROTOR,MAGNETO	1		D		
1 (112-01360-212	CASE,FAN	1		D		
34	203-0604A-202	GROMMET	1		C		
_	470 44000 000	acan anu.	ارا		_		
	173-11600-800	l '	1		С	=	
1 1	173-0075G-800	· ·	1			~E263075	
		WIRE,LEAD	1			E263076~	
1 1		IGNITOR,TTI-ID	1		В		
1 1		SCREW,4X15	2			~E179755	
51	990-11040-081	SCREW,4X8	1		C	E179756~	
	992-10040-012		2		D		
1 1	255-01300-200	COVER,SPARK PLUG	1		D		
57	132-01300-200	PAN,FLASH	1		ם		
<u> </u>]	.


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 1 cont.

FIC	AUNE I CUIIL.	1 BC-322 P/	4	17	5	lið í íNG	
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
63	102-01300-200	INSULATOR	1		D		
64	990-11050-181	SCREW,5X18	1		В		
65	992-10050-012	WASHER,S,5	1		Α		
66	992-01050-011	WASHER,5	1		Α		
67	990-11050-251	SCREW,5X25	4		D		
68	992-10050-012	WASHER,S,5	4		Α		
73	990-11040-181	SCREW,4X18	2		D		
74	992-10040-012	WASHER,S,4	2		D		i
75	992-00040-011	WASHER,4	2		В		
76	992-01080-011	WASHER,8	1		Α		·
77	991-01080-011	NUT,8	1		В		
78	990-11050-181	SCREW,5X18	4		В		
79	992-10050-012	WASHER,S,5	4		Α		
80	992-10050-012	WASHER,S,5	4		Α		
81	991-01050-011	NUT,5	4		Α		
82	990-11040-121	SCREW,4X12	2	8	В		
83	992-10040-012	WASHER,S,4	2		D		
84	992-01040-011	WASHER,4	2		С		
1	990-11050-121		1		Α		
	992-10050-012	WASHER,S,5	1		Α		
87	992-01050-011	WASHER,5	1		Α		
	<u> </u>						

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

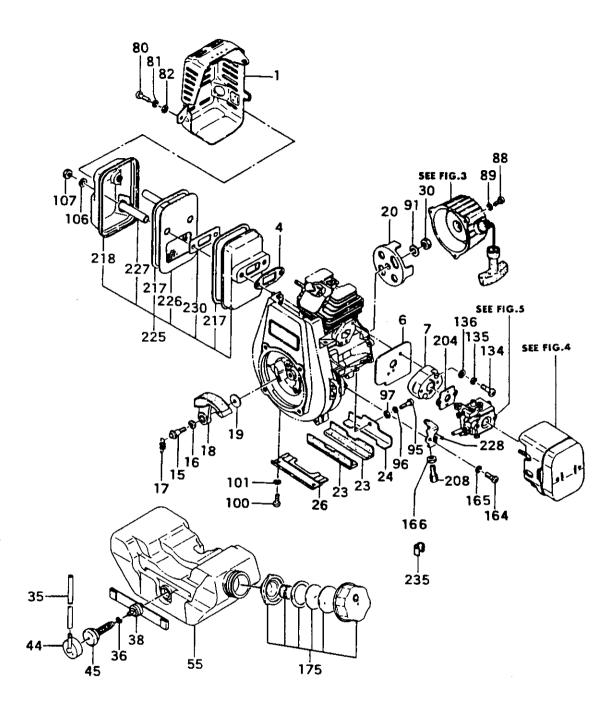

	ZUNE Z	1 DU-022 P	_				
REF.	PART NO.	PART DESCRIPTION	Q	C	S	SERIAL NO.	REMARKS
1	738-01320-800	PROTECTOR, MUFFLER	1		D		
4	737-01225-210	GASKET,MUFFLER	1		D		
6	403-01320-200	GASKET,INLET MANIFOLD	1		c		
7	1	INSULATOR, CARBURETOR	11		D		
5	1	BOLT,CLUTCH,STEP	3		C		
6		WASHER, CLUTCH A	3		A		
"	330-02103-200	WASHEN, DECTOR	١٣		^		
7	242 01515 200	SPRING,CLUTCH	3		ا ا		
		· ·	3		A B		
	290-02110-802	1	ı				
9		WASHER,CLUTCH,B	3		В		
		PULLEY,STARTER	1		D		
	655-01300-200	· ·	2		C		
24	653-01300-201	METAL, TANK HOLDING	1		С		
26		BRACKET,TANK	1		С		
30	066-00601-200	NUT,FLYWHEEL	1		D		
35	700-03005-210	PIPE,FUEL,3X5X210	1		c		
36	680-04019-210	CLIP,7	1		В		
38	675-0608A-900	FILTER, FUEL	1		Α		
44	l .	CAP, RUBBER PIPE	1		Α		
				[
45	678-00601-201	PIPE,RUBBER	1		Α		
1	591-0132R-200		1		С		
80	ľ	SCREW,4X10	2		A		
	992-10040-012	1 · · ·	2		D		
		WASHER,4	2		С	-	
88	990-11040-121	SCREW,4X12	3		В		
	330 11040 121	0011244,47(12	ľ		٦		
90	000 10040 010	WAGUED O 4					
	992-10040-012	1 '	3		D		
	B	WASHER,FLYWHEEL	1		D		;
		SCREW,6X14	1		С		
	992-10060-012	WASHER,S,6	1		Α		
	992-01060-011	WASHER,6	1		Α		
100	990-11050-121	SCREW,5X12	2		Α		
101	992-10050-012	WASHER,S,5	2		Α		
106	992-01060-011	WASHER,6	2		A		
107	991-74060-010	NUT,6	2		D		
134	990-11050-241	SCREW,5X24	2		Ы		
135	992-10050-012	WASHER,S,5	2	'	А		
	992-00050-011	WASHER,SMALL,5	2		С		
		· · ·, - · · ·, -	~	ļ			
164	990-11050-121	SCREW,5X12],		Α		İ
4		WASHER,S,5	1	- 1	\hat{A}		
1	991-01060-013		1 1		B		
100	991-01000-013	1,0	1				

^{*} Indicates the part is included in a kit or assembly and is not availiable individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
175	595-05024-90	CAP, TANK	1		Α		
204	402-00601-20	GASKET,CARBURETOR	1		Α		
208	894-01401-201	RECEIVER,OUTER	1		В		
217	739-01320-201	GASKET,MUFFLER	2		С		
218	717-01320-802	BODY,MUFFLER B	1		С		
225	706-01320-902	MUFFLER,ASS'Y	1		D		
226	722-01320-801	PARTITION, MUFFLER	1		D		
227	740-0136G-200	COLLAR,MUFFLER	2		D		
228	878-01320-200	METAL, THROTTLE WIRE HOLDING	1		D		
230	718-0136S-200	FLANGE,MUFFLER	1		D		
235	778-36100-200	CLAMP,CORD	1		D		
ŀ							

^{*} Indicates the part is included in a kit or assembly and is not availiable individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 RECOIL STARTER

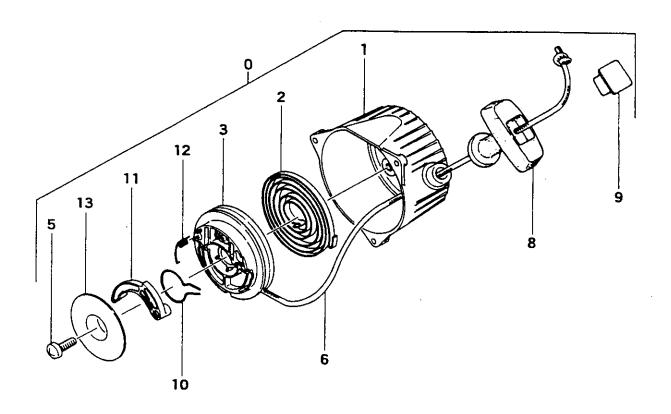


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
0	762-01250-900	STARTER, RECOIL ASS'Y	1		D		
1	772-01250-201	BODY,RECOIL STARTER	1		D	•	
2	779-01250-200	SPRING,RECOIL	1		В		i i
3	769-01250-200	PULLEY,STARTER	1		С		
5	990-15050-121	SCREW,5X12	1		D		
6	783-01250-200	ROPE,STARTER,3.5X850	1		D		
8	785-01620-200	HANDLE,STARTER	1		C		
9	795-01620-200	SEAL,HANDLE KNOB	1		D		
10	836-06092-200	SPRING,FRICTION	1		D		
11	788-01250-200	PAWL,STARTER	1		D		
12	832-01250-200	SPRING,RETURN	1		D	:	
13	837-06092-200	PLATE, FRICTION	1		D		

FIG.4 AIR CLEANER


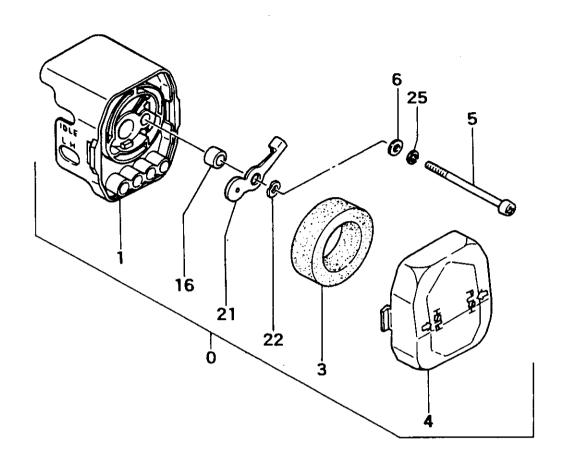


FIGURE 4

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
0	410-0137R-901	CLEANER,AIR ASS'Y	1		D		
1	423-0137R-20	BODY,AIR CLEANER	1		D		
3	446-0602W-200	ELEMENT, CLEANER	1		Α		
4	424-0137R-200	COVER,AIR CLEANER	1		В		
5	990-11050-571	SCREW,5X57	2		C		
6	992-01050-011	WASHER,5	2		Α		
1				Ì		i	
16	470-0602N-200	COLLAR,CLEANER	2		С		
21	528-0602W-202	PLATE,CHOKE	1		D		
22	992-04080-030	WASHER,8	1		С		
25	992-10050-012	WASHER,S,5	2		Α		


FIG.5 CARBURETOR

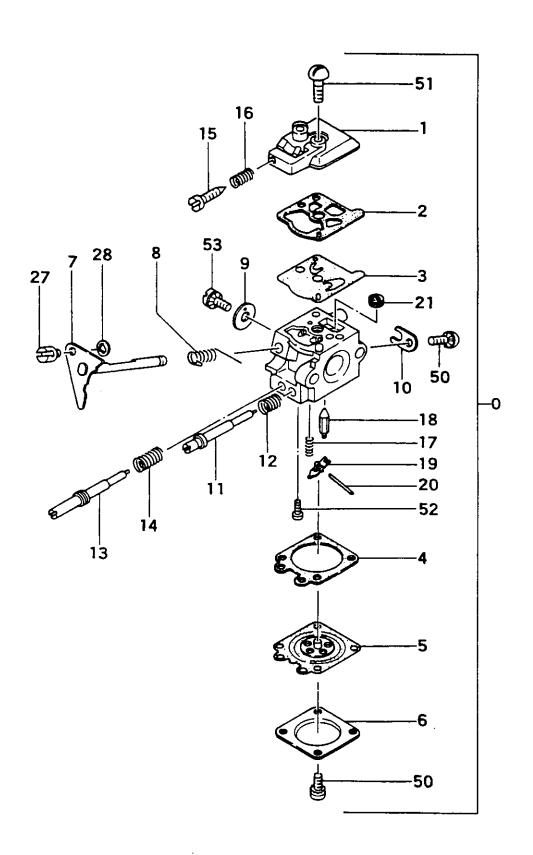


		100-32217			_		
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
0	455-25010-910	CARBURETOR, ASS'Y	1		D		
1	575-25028-200	BODY,PUMP	1		ם		
-2	** ** **	*GASKET,PUMP	1		D		* Contained in Carb. Repair Kit
3	~~~	*DIAPHRAGM,PUMP	1		C		650-25001-910
4	~~~	*GASKET,DIAPHRAGM	1		Α		(Not availiable individually)
5	~~~	*DIAPHRAGM,METERING	1		Α		
6	476-25004-200	COVER,DIAPHRAGM	1		D		
7	464-25010-800	SHAFT,THROTTLE	1		D		
8	486-25009-200	SPRING,THROTTLE	1		C		
9	488-25008-200	VALVE,THROTTLE	1		D		
10	557-25006-200	CLIP,THROTTLE SHAFT	1		D		
11	460-25010-210	SCREW,HIGH ADJUST	1		D		
1	1	SPRING,ADJUST,HIGH	1		D		
13	461-25010-200	SCREW,ADJUST,LOW	1		D		
14	623-25001-200	SPRING,ADJUST,LOW	1		D		
15	462-25006-200	SCREW,IDLE ADJUST	1		D		
16	463-25006-200	SPRING,IDLE ADJUST	1		D		
17	477-25007-200	SPRING,VALVE	1		D		
18	~~~	*VALVE,NEEDLE	1		C		
19	~~~	*HINGE,VALVE	1		С		
21	~~~	*PIN,HINGE	1		D		
27	~~~	*SCREEN,INLET	1		C		
27	539-25008-200	SWIVEL	1		С		
28	489-25008-200	RING,STOP	1		С		
1	548-25012-200	SCREW,SET	5		D		
51	514-25001-200	SCREW,SET	1		D		
52	546-25001-200	SCREW,SET,HINGE PIN	1		D		
53	467-25003-200	SCREW,SHUTTER	1		С		
1	I						J.

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.6 CLUTCH CASE

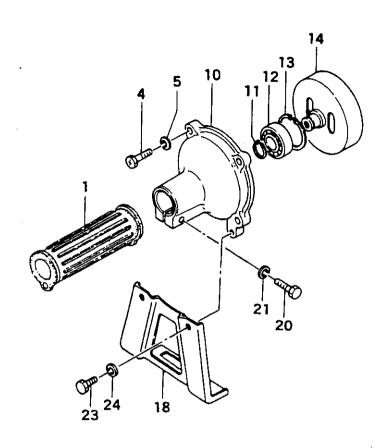


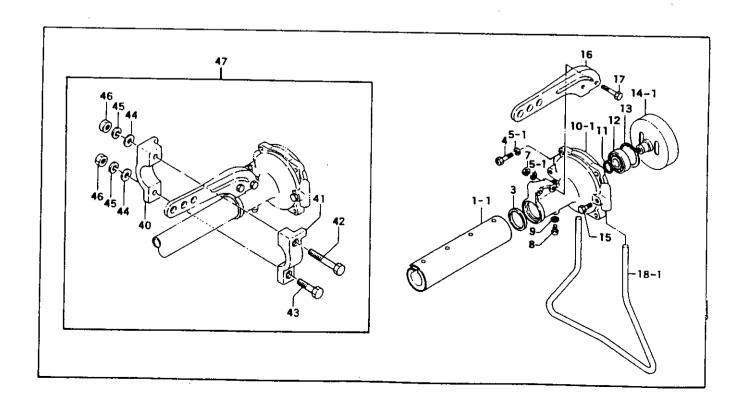

	IUNE O	1 BC-322 PA	4/1	! / \	<u>ا</u> ر		
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1-1	336-33411-811	PAD,CUSHION	1		D	~E179755	
1	504-37003-200	GRIP,RUBBER	1		D	E179756~	
3	999-66283-560	SEAL,OIL	1		D	D011681~	
4	990-23060-221	BOLT,PLUS,6X22	4		C		
5	992-10060-012	WASHER,S,6	6		Α		
7	991-01060-011	NUT,6	2		Α	D011681~	
8	990-11060-101	i '	1		ı	D011681~	
9	317-33411-201	GASKET,OIL	1		D	D011681~	
		HOUSING,CLUTCH	1		1	~A269309	
10-1	331-33411-210	HOUSING,CLUTCH	1		1	~D011680	
10	331-33680-201	CASE,CLUTCH	1		D	D011681~	
11	993-50015-002	RING,STOP,C-15 EX	1		С		
1							
	I .	BEARING,BALL,#6202ZZ	1		C		
		RING,IN,C-35,STOP	1		[C		
14-1	332-33411-804	1	1		D	~D011680	
14	1	DRUM,CLUTCH	1		C	D011681~	·
15	990-21060-151	BOLT,6X15	2		C	D011681~	:
16	335-33411-220	METAL,LIFTING	1		D		
	1	BOLT,6X30	2			D011681~	
1	741-33411-200	STAND	1			~A269309	
	741-33576-200		1			~D011680	
	739-33681-200		1			D011681~	
	990-21060-251	BOLT,6X25	1			D011681~	
21	992-10060-012	WASHER,S,6	1	ł	Α	D011681~	
					_		
1		BOLT,5X10	2			D011681~	
	992-10050-012	1	2		_	D011681~	
		HOLDER, CLUTCH CASE A	1		1	~C182862	
		HOLDER, CLUTCH CASE B	1		1	C182863~	
		BOLT,6X40	1			C182863~	
43	990-21060-251	BOLT,6X25	1		ט	C182863~	
,,	000 01000 011	IWA OLIER O	اہا			04.000.00	
		WASHER,6	2			C182863~	
1		WASHER,S,6	2			C182863~	
1 1	991-01060-011	NUT,6	2			C182863~	
47	TSL-300	LOCK,SHAFT,SWIVEL	1		Е	NLA	
L							

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.7 HANDLE

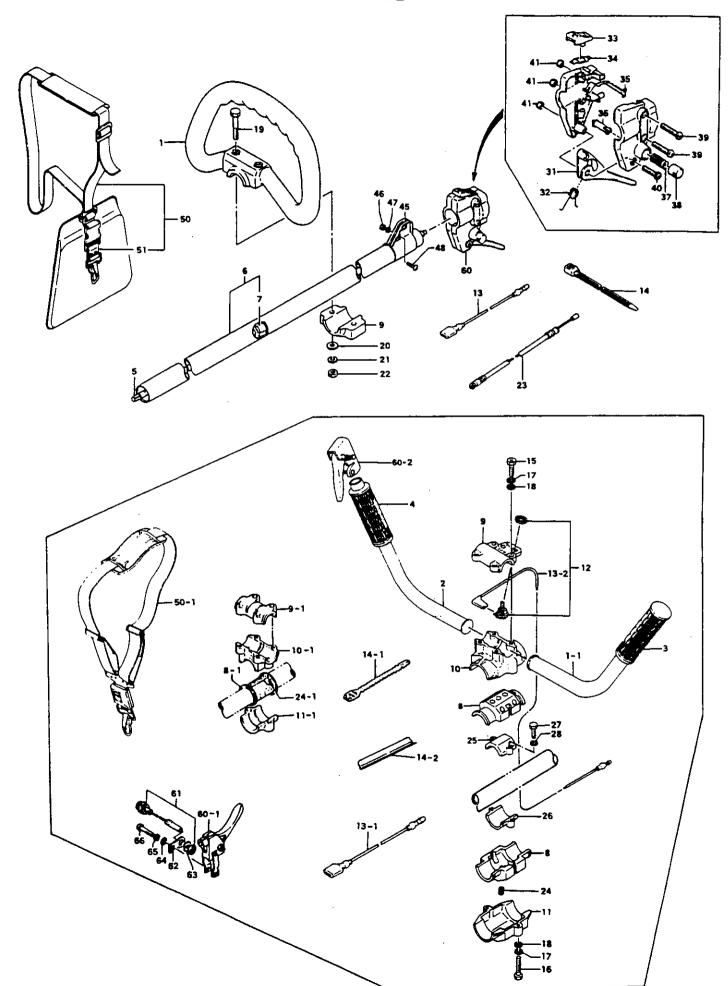

Der	DADTNO	PART DESCRIPTION					DELIABIO
REF.		PART DESCRIPTION	+	2		SERIAL NO	REMARKS
1-1	500-33411-202		2			~E179755	
1		HANDLE,BLACK	1			E179756~	
2	l .	PIPE,HANDLE	1			E179756~	
3	i	GRIP,HANDLE	2		D	E179756~	
4	503-33576-200	GRIP,HANDLE	1		D	E179756~	
5	343-33411-202	SHAFT,DRIVE	1		C		
6	341-33413-800	PIPE,DRIVE SHAFT	1		D	~E179755	
6	341-33564-800	PIPE,DRIVE SHAFT	1		lc	E179756~	
7	347-33411-912	BUSHING, DRIVE SHAFT	5		D		
8-1		CUSHION, HANDLE BRACKET	1			~C001100	
8	i	CUSHION	2				
9-1		BRACKET,HANDLE A	1		D	0001101-	
~ ,	300 00411 200	BRACKET, HANDLE A	Ι'		D		
9	506 33576 310	BRACKET,HANDLE,A			_	E170755	
9			1			~E179755	
_		BRACKET, HANDLE, BLACK				E179756~	
	507-33411-201	BRACKET,HANDLE B	1			~C001100	
1	507-33576-200	BRACKET,HANDLE B	1			C001101~	·
	508-33411-20	BRACKET,HANDLE,C	1			~C001100	
11	508-33576-200	BRACKET,HANDLE,C	1		D	C001101~	
				l			
	162-01300-900	=	1		Α	C001101~	
13-1	178-0602W-800	CORD,STOP	1		D	~C001100	
13-2	178-33680-800	CORD,STOP	1		D	~E179755	
13	178-37003-800	CORD,STOP	1		D	E179756~	
14-1	903-32201-200	HOLDER,THROTTLE WIRE	1		D	~C001100	
14-2	198-33576-200	CLAMP,CORD	1			C001101~	
		·		ĺ			
14	198-33576-200	CLAMP,CORD	1		Ы	E179756~	
	990-23060-221	BOLT,PLUS,6X22	4	ı		E179756~	
	990-21060-301		2		L	E179756~	
1 :		WASHER,S,6	6	ŀ	- 1		
18	992-01060-011		FΙ			E179756~	
19		WASHER,6	6		ı	E179756~	
19	990-21060-451	BOLT,6X45	2		미	E179756~	
	000 04000 04:						
1		WASHER,6	2			E179756~	
		WASHER,S,6	2		A	E179756~	
		NUT,6	2		D	E179756~	
		WIRE,THROTTLE	1		c	~C001100	
23	885-0137M-802	WIRE,THROTTLE	1	- 1	D	E179756~	
24-1	176-0062W-201	TERMINAL, GROUNDING	1	- 1		~C001100	
		-		- 1		,	
24	176-33576-200	TERMINAL,EARTH	$\lfloor 1 \rfloor$		ام	C001101~	
		BRACKET,A			- 1	C001101~	
26		BRACKET,B			- 1		İ
-	0-000/0-200	DIMOREI,D			기	C001101~	
<u>i</u>							


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIGURE 7 cont.

REF.	DARTNO						
	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
27	990-21050-201	BOLT,5X20	2		D	C001101~	
28	992-10050-012	WASHER,S,5	2		Α	C001101~	
31	880-33564-200	ARM,THROTTLE	1		D	E179756~	
32	832-33564-200	SPRING,RETURN	1		D	E179756~	
33	162-33564-210	SWITCH,STOP	1		D	E179756~	
34	262-33564-200	SPRING,STOP SWITCH	1		D	E179756~	
35	176-33564-200	TERMINAL,EARTH	1		D	E179756~	
36	956-33564-200	BUTTON,LOCK A	1		С	E179756~	
37	958-37101-200	SPRING,LOCK,BUTTON	1		D	E179756~	
38	957-33564-200	BUTTON,LOCK,B	1		С	E179756~	
39	990-11050-301	SCREW,5X30	2		С	E179756~	
40	994-31050-251	SCREW,S.,5X25	1		С		
41	991-86050-000	NUT,LOCK,5	3		D	E179756~	
45	335-33682-200	METAL,LIFTING	1		C	D011681~	
46	991-01050-011	NUT,5	1		A,	D011681~	
47	992-10050-012	WASHER,S,5	1		Α	D011681~	
48	990-11050-161	SCREW,5X16	1		В	D011681~	
50-1	SS-250	STRAP,SHOULDER	1		С		
		HOOK,ASS'Y	1		D		
		LEVER,THROTTLE ASS'Y	1		С	~C001100	
		LEVER,THROTTLE ASS'Y	1			~E179755	
		LEVER,THROTTLE ASS'Y	1			E179756~	
	170-01004-801	BUTTON,STOP	1			C001101~	
62	640-0137R-200	BRACKET,STOP BUTTON	1		D	C001101~	
63	992-04080-030	WASHER,8	1		С	C001101~	
64	992-01050-011	WASHER,5	1		Α	C001101~	
65	992-10050-012	WASHER,S,5	1		Α	C001101~	
66	994-31050-251	SCREW,S.,5X25	1		С	C001101~	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.8 GEAR CASE

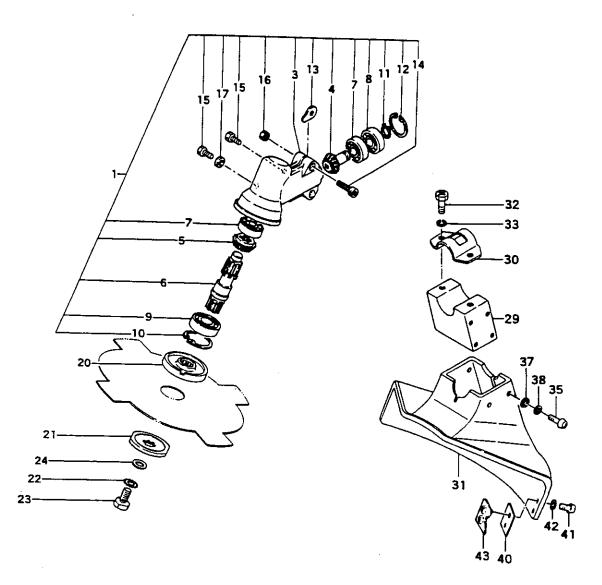

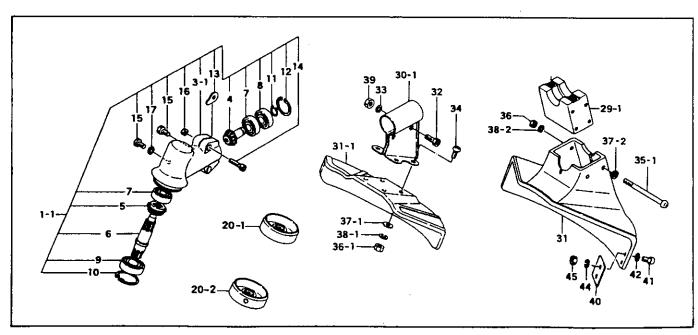

	IUNE 0	1 BC-322 PA	7//		<i>-</i>	-1011114	
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	300-37000-000	SET,GEAR CASE	1		D	~D159095	
3	300-33410-000	SET,GEAR CASE	1		D	D159096~	
4	302-37000-200	USE SET #3013341100	1		D		
5	301-33411-200	USE SET #3013341100	1		D		
6	304-37000-200	SHAFT,GEAR	1		D		
7	999-61600-000	BEARING,BALL,#6000	2		C		
8	999-61600-004	BEARING,BALL,#6000DD	1		C		
9	999-61600-203	BEARING,BALL,#6002D	1		С	'	
10	993-51032-002	RING,STOP,C-32 IN	1		С		
11	993-50010-002	RING,STOP,C-10 EX	1		С		
12	993-51026-002	RING,STOP,IN,C-26	1		D		
13	324-33410-201	WASHER,GEAR CASE	2		C		
14	990-51050-203	BOLT,HEX.HOLE,5X20	2		C		
15	990-23060-121	BOLT,PLUS,6X12	2	•	C		
16	991-01050-011	NUT,5	2		Α		
17	317-33411-201	GASKET,OIL	1		D		
20-1	310-33410-202	HOLDER, CUTTER	1		E	~C158400	
20	310-33524-20	HOLDER, CUTTER	1		C	D159096~	:
1 1		CAP, CUTTER HOLDER	1	i	В		
1 1		WASHER,TOOTHED LOCK,8	1		В		
1 1		BOLT, CUTTER FIXING (LEFT)	1		Α		
1 1		WASHER,8	1		Α		
1 1		SPACER,BRACKET	1		D		•
30-1	442-33410-200	BRACKET,SAFETY GUARD	1		D	~C158400	
1 1							
1 1		BRACKET	1			C158401~	
		GUARD,SAFETY	1		E	~C158400	
		GUARD,SAFETY	1			C158401~	
1 F		BOLT,PLUS,6X15	2		Α		
F 1		WASHER,S,6	2		Α		
34	990-11050-121	SCREW,5X12	4		Α	~C001100	
_	000 44000 151	0000000000			إ		
1 1		SCREW,5X15	4			C001101~	
1	990-11050-751	SCREW,5X75	2			~D011380	
1 1		SCREW,5X16	4		_ [D011381~	
1 1	i	NUT,5	4		Α		
1 1	992-01050-011	WASHER,5	4	-	A		
38	992-10050-012	WASHER,S,5	4		Α		
_	004 04000 511	<u> </u>		ļ			
1 1		NUT,6	2		Α		
1 1		BLADE	1	- 1	C		
41	990-11040-161	SCREW,4X16	2		A	~C158400	
<u> </u>							


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 8 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
41	990-11040-121	SCREW,4X12	2		В	C158401~	-
42	992-01040-011	WASHER,4	2		C		
43	799-33005-200	GUIDE,BLADE	1		С		
44	992-10040-012	WASHER,S,4	2		D		
45	991-01040-011	NUT,4	2		c		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.9 TOOLS & NYLON HEAD

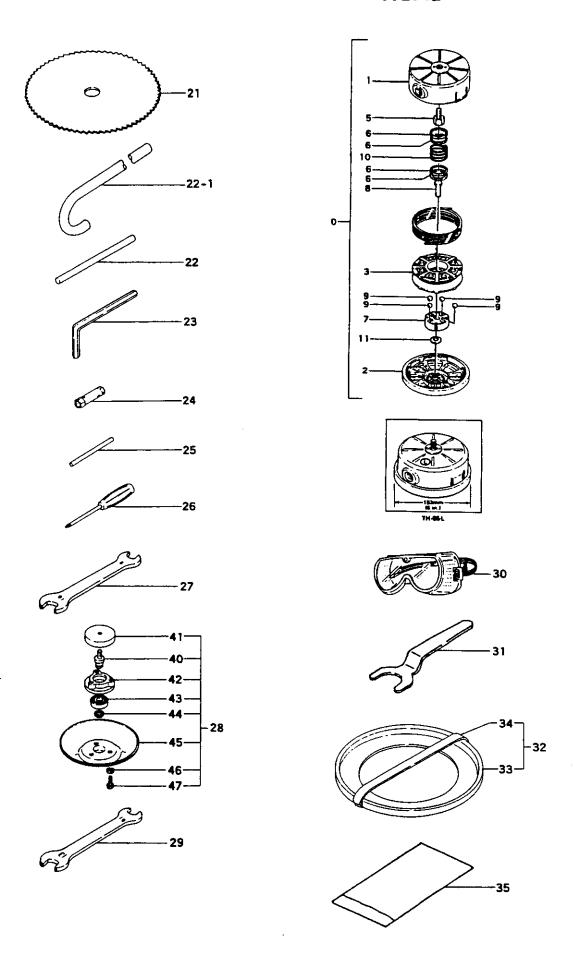

	TIGOTES TIGOTES TING										
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS				
0	783-33670-93	IR487/AUTO HEAD (L)	1		В						
1	786-33670-92	BODY,CUTTING	1	İ	C						
2	789-33670-23	CAP,BODY	1		В						
3	787-33670-210	REEL,(L)	1		C	<u>.</u>					
4	314-33670-20	BOLT,8X1.25 LH GOLD	1		Α						
6	792-33004-200	WASHER, REEL	4		Α						
7	790-33004-200	SLIDER,REEL	1		Α						
8	791-33004-200	HOOK,REEL SLIDER	1		Α						
9	673-35600-20	BALL,STEEL	4		Α						
10	793-33910-20	SPRING,REEL,SILVER	1		Α						
11	358-02103-200	WASHER,CLUTCH A	1	ļ	Α						
21	746104	BLADE,SAW,9X80,(PSB-980)	1		Α						
		STOPPER,HANDLE	1		D	C158401~					
1	752-33900-200	•	1		D	D159096~					
23		WRENCH,HEX,4	1	,	D						
24	1	SPANNER,BOX,17X19	1		D						
4	951-20000-200	1	1		D						
26	862-20000-200	SCREW DRIVER,PHILLIPS	1		D						
1	!										
1	801-20000-200	1	1		D						
28		DISK,BLADE SAFETY ASS'Y	1		C						
29	1	SPANNER,10X13	1		D						
1	1	GOGGLES,SAFETY	1			D011381~					
1		SPANNER,41	1			C158401~					
32	BP-100	PROTECTOR,BLADE,9/10*	1		E						
		BAND, CUTTER COVER	[1]		D						
	948-32310-200	•	1		D						
1		BOLT,DISK FIXING	1		D						
41		COVER, FREE WHEELING DISK	1		D						
	602-33411-201	METAL, FREE WHEELING DISK	1		D	~C182861					
43	999-61600-203	BEARING,BALL,#6002D	[1]		С	:					
					إرا						
		RING,STOP,C-15 EX	1		C						
	601-33411-201	DISK,BLADE SAFETY	1		D						
1 1	992-10060-012	WASHER,S,6	3		D						
	990-21060-121	BOLT,6X12	3		C						
47	990-21060-151	BOLT,6X15	3		С						
			L								

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.10 MARKS





CAUTION

TO AVOID POSSIBLE INJURY, GUARD MUST BE IN PLACE DURING OPERATION.
FOR SAFE USE, FOLLOW INSTRUCTIONS IN OWNER'S MANUAL
EYE PROTECTION SHOULD BE WORN BY USER OF THIS UNIT

-2

FIGURE 10

REF.	PART NO.	PART DESCRIPTION	Q	C	s	SERIAL NO.	REMARKS
1	906-43670-220	DECAL,MODEL	1		D		
2	929-33576-201	DECAL,SYMBOL	1		D		