


H11

Tanaka

THT-1800/L/S


Serial No.-B089390

H11-01 THT-1800/L/S CYLINDER/PISTON/CRANK SHAFT

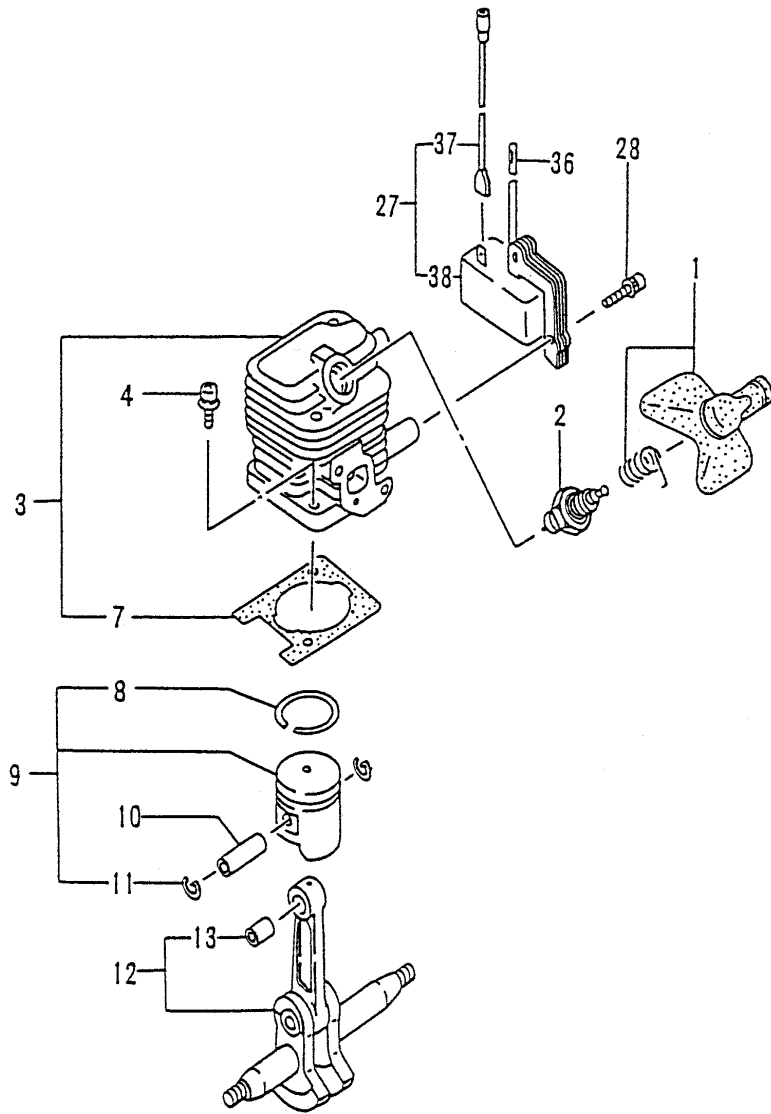


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
001	157-06500-91	1	
002	018-00555-20	1	
003	001-0650A-90	1	
004	994-61050-184	2	
007	017-06500-20	1	
008	041-00601-21	1	
009	030-06500-90	1	- Y322900
009	030-0650A-90	1	Y322901 -
010	037-06500-20	1	
011	039-01620-20	2	
012	046-06500-80	1	
013	999-62081-225	1	
027	153-21532-90	1	
028	994-64040-184	2	
036	250-06500-20	1	
037	178-06500-80	1	
038	167-21532-80	1	

H11-02 THT-1800/L/S CRANK CASE

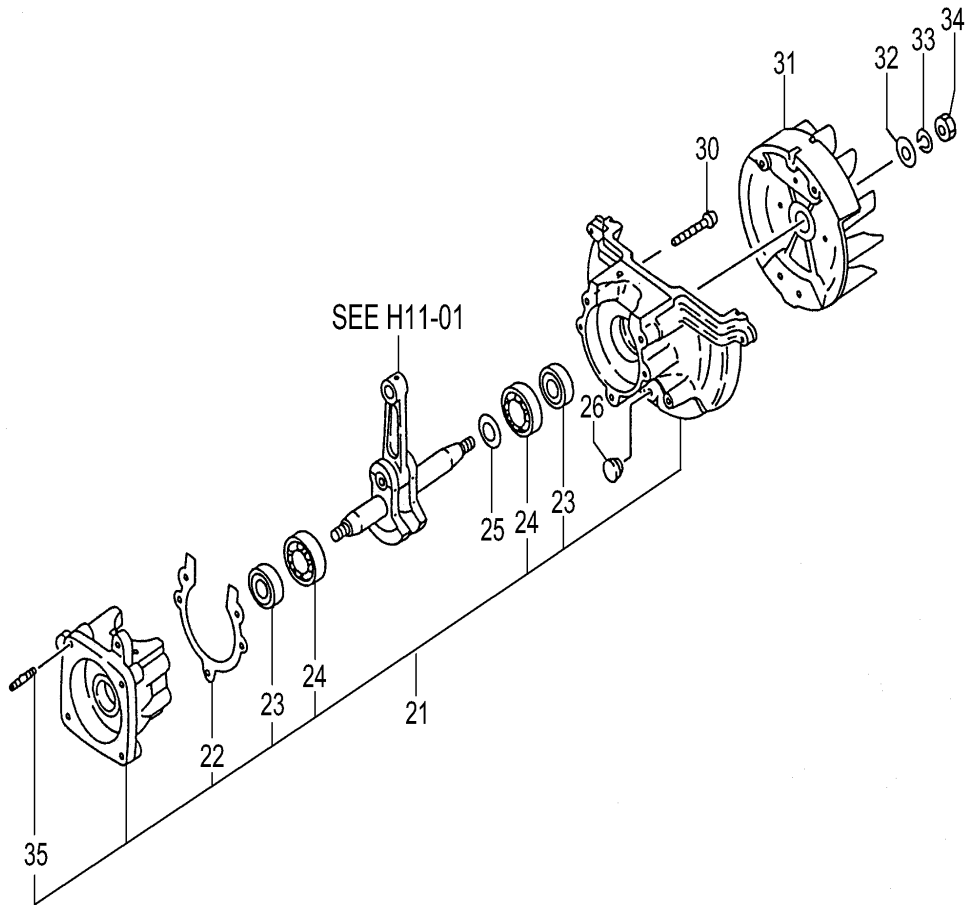


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
021	072-06500-90	1	
022	090-06500-20	1	
023	999-66122-200	2	
024	999-61600-115	2	
025	330-00200-21	V	
025	330-00200-22	V	
025	330-00200-23	V	
025	330-00200-24	V	
026	599-00601-20	1	
030	994-61050-304	3	
031	155-21523-80	1	
032	992-01080-011	1	
033	992-10080-012	1	
034	991-01080-011	1	
035	100-02100-20	2	

H11-03 THT-1800/L/S ENGINE-1

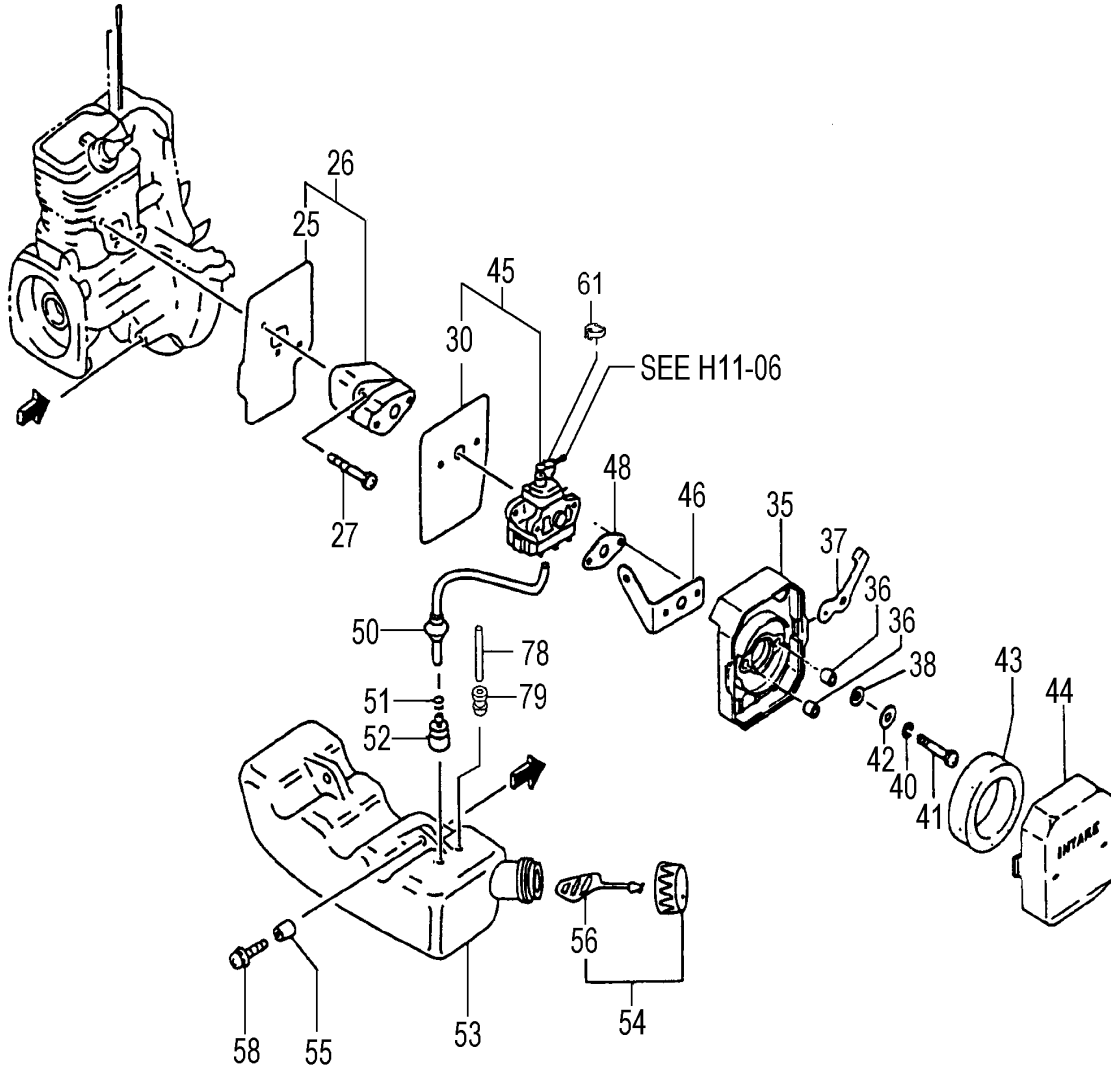



REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
025	403-06500-20	1	
026	404-06500-90	1	
027	994-64050-254	2	
030	402-06500-20	1	
035	423-0072Z-81	1	
036	470-00025-20	2	
037	528-0602K-20	1	
038	453-0602K-20	1	
040	992-10050-012	2	
041	990-11050-652	2	
042	992-01050-011	2	
043	446-0072Z-20	1	
044	424-0072Z-20	1	
045	455-06511-90	1	- Z298250
045	455-06513-90	1	- B080000
045	455-06511-91	1	B080001 -
046	436-0650B-20	1	
048	431-06020-20	1	
050	223-06500-90	1	
051	680-00731-20	1	
052	675-04042-80	1	
053	591-06500-21	1	- Z298250
053	591-0650U-22	1	Z298251 -
054	595-00093-90	1	
055	659-00801-20	2	
056	626-32550-20	2	
058	994-63050-185	2	
061	560-07120-20	1	A089201 -
078	700-03005-07	1	Z298251 -
079	534-32710-20	1	Z298251 -

H11-04 THT-1800/L/S ENGINE-2

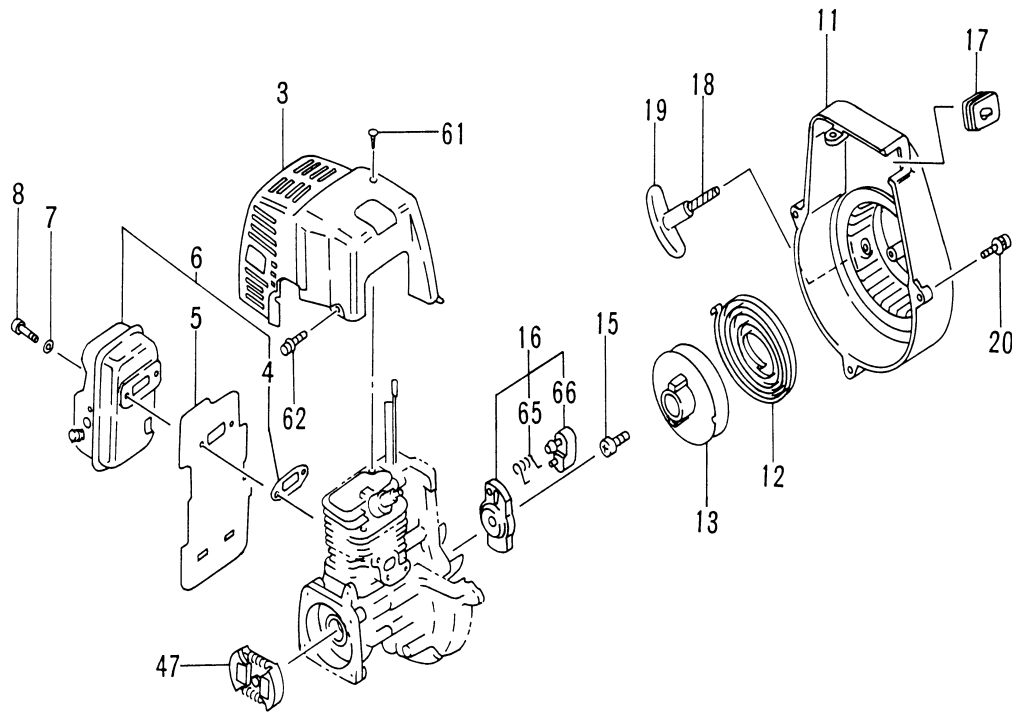


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
003	738-06500-20	1	
004	737-06500-20	1	
005	133-06500-20	1	
006	704-06511-91	1	
007	992-01050-011	2	
008	990-51050-503	2	
011	112-06500-80	1	
012	780-06097-20	1	
013	774-06097-20	1	
015	839-02010-20	1	
016	798-06500-90	1	
017	203-0604A-20	1	
018	783-06097-20	1	
019	785-06410-20	1	
020	994-63040-154	3	
047	277-0634F-90	1	
061	990-72045-164	1	
062	994-25040-128	2	
065	790-06097-20	1	
066	788-06500-20	1	

H11-05 THT-1800/L/S CARBURETOR (SERIAL NO.-Z298250)

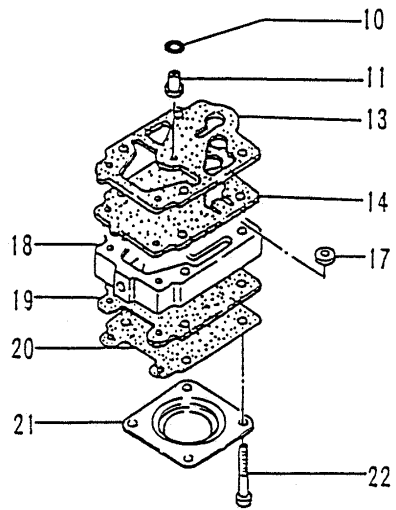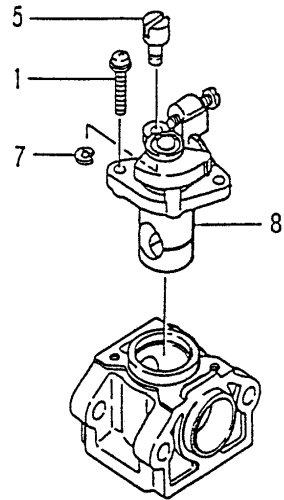


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	548-25140-20	2	
005	539-25120-20	1	
007	489-25100-20	1	
008	488-25145-80	1	
010	550-25100-20	1	
011	599-2000W-39	1	
013	577-25100-20	1	
014	576-25100-20	1	
017	578-25007-20	1	
018	575-25152-80	1	
019	475-25001-20	1	
020	474-25001-80	1	
021	476-25004-20	1	
022	548-25101-20	4	

H11-06 THT-1800/L/S CARBURETOR (SERIAL NO.Z298251-)

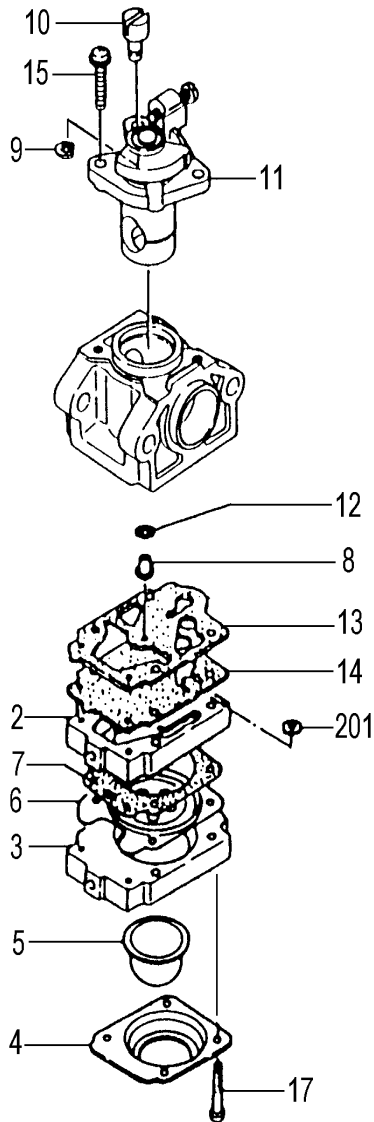


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
002	575-25157-80	1	
003	442-25151-80	1	
004	476-25151-20	1	
005	447-25108-20	1	
006	474-25001-80	1	- B080000
006	474-25241-80	1	B080001 -
007	475-25153-20	1	
008	599-2000W-39	1	
009	489-25100-20	1	
010	539-25120-20	1	
011	488-25145-80	1	- B080000
012	550-25100-20	1	
013	577-25100-20	1	
014	576-25100-20	4	
015	548-25140-20	2	
017	548-25151-20	4	
201	578-25007-20	1	

H11-07 THT-1800/L/S HANDLE

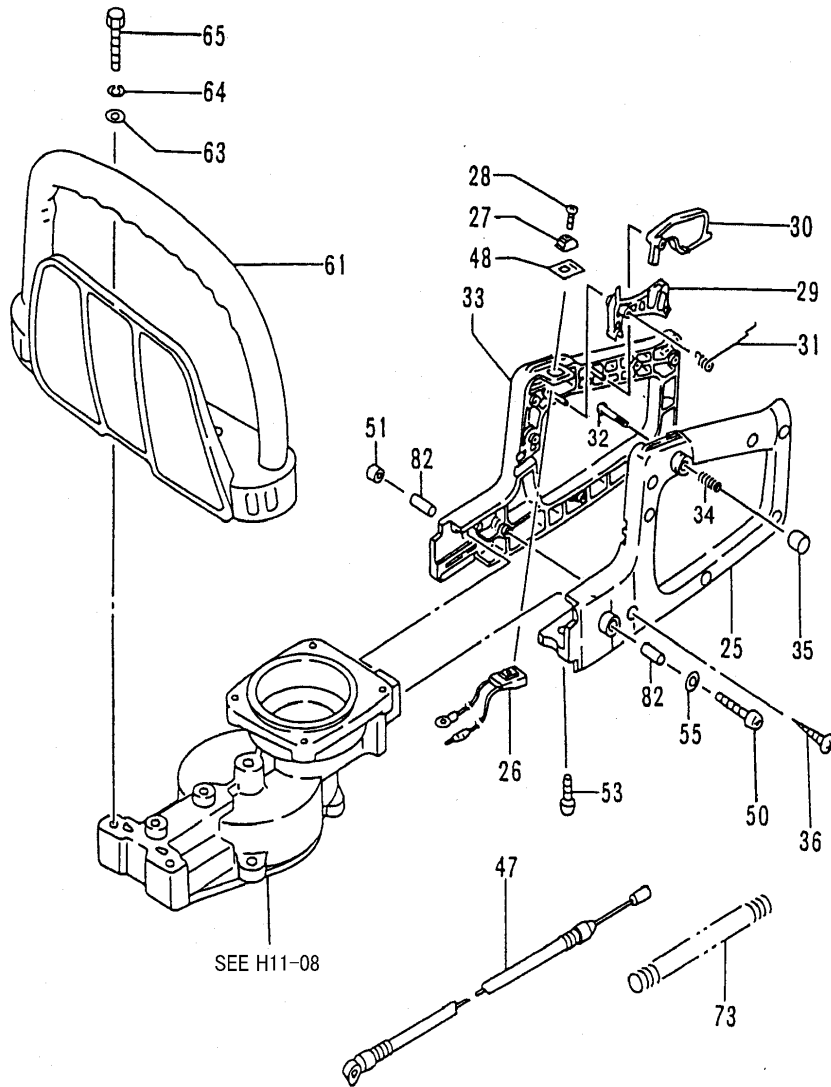


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
025	050-33150-22	1	
026	170-3317A-80	1	
027	258-11650-20	1	
028	994-31030-101	1	
029	230-33150-20	1	
030	231-33150-20	1	
031	232-33150-20	1	
032	064-32530-20	1	- Z298250
033	051-33150-23	1	
034	066-32300-20	1	- Z298250
035	725-32600-20	1	- Z298250
035	765-32120-20	1	Z298251 -
036	993-11041-812	7	
047	885-06511-80	1	
048	925-32530-20	1	
050	994-14050-451	1	
051	991-78050-010	1	
053	994-15060-181	1	
055	992-00050-011	1	
061	210-33160-22	1	
063	992-01050-061	2	- W045750
063	368-32057-20	2	W045751 -
064	992-10050-062	2	
065	990-51050-403	2	
073	164-10015-00	1	
082	659-00801-20	2	

H11-08 THT-1800/L GEAR CASE/BLADE (500MM)

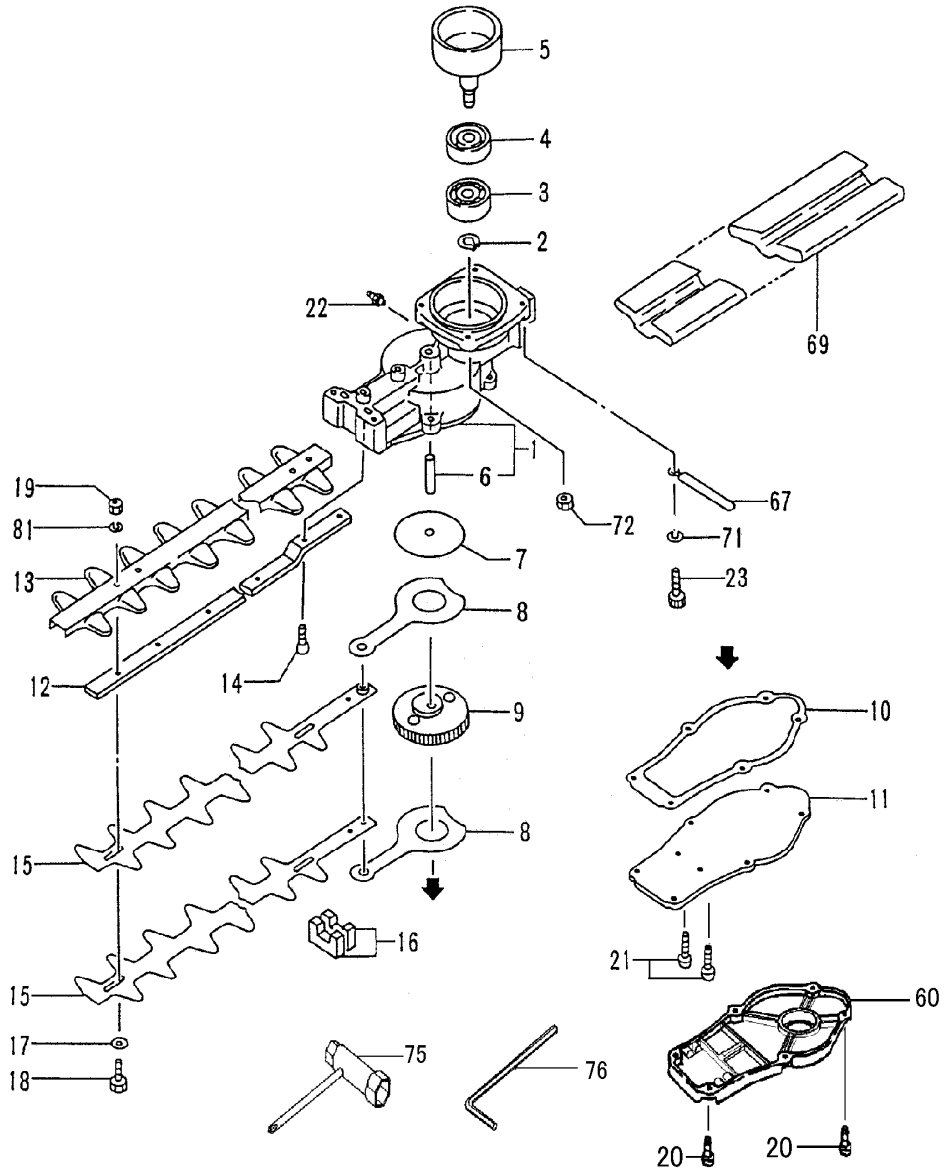

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-3317A-81	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
006	305-33160-20	1	
007	075-33160-20	1	
008	101-33190-20	2	
009	307-33180-20	1	
010	303-33160-20	1	
011	630-33160-20	1	
012	122-32292-20	1	- Z298250
012	122-33254-20	1	Z298251 -
013	136-33160-20	1	
014	990-52060-165	2	
015	121-33258-22	2	
016	085-33160-20	2	
017	129-33202-20	4	
018	124-33202-21	4	- Z298250
018	124-32287-20	4	Z298251 -
019	123-33202-20	4	- Z298250
019	991-82060-001	4	Z298251 -
020	994-61040-124	6	Z298251 -
021	994-61040-104	8	- Y323200
021	994-61040-104	2	Z323201 -
022	300-32250-80	1	
023	990-51060-143	2	- A084700
023	994-61060-184	2	A084701 -
060	301-33160-21	1	Y323201 -
067	198-10246-80	1	
069	138-33258-20	1	
071	992-10060-012	2	- A084700
072	994-40060-011	2	
075	036-29331-50	1	
076	813-20000-20	1	
081	992-01060-011	3	- Z298250

H11-09 THT-1800S GEAR CASE/BLADE (430MM)

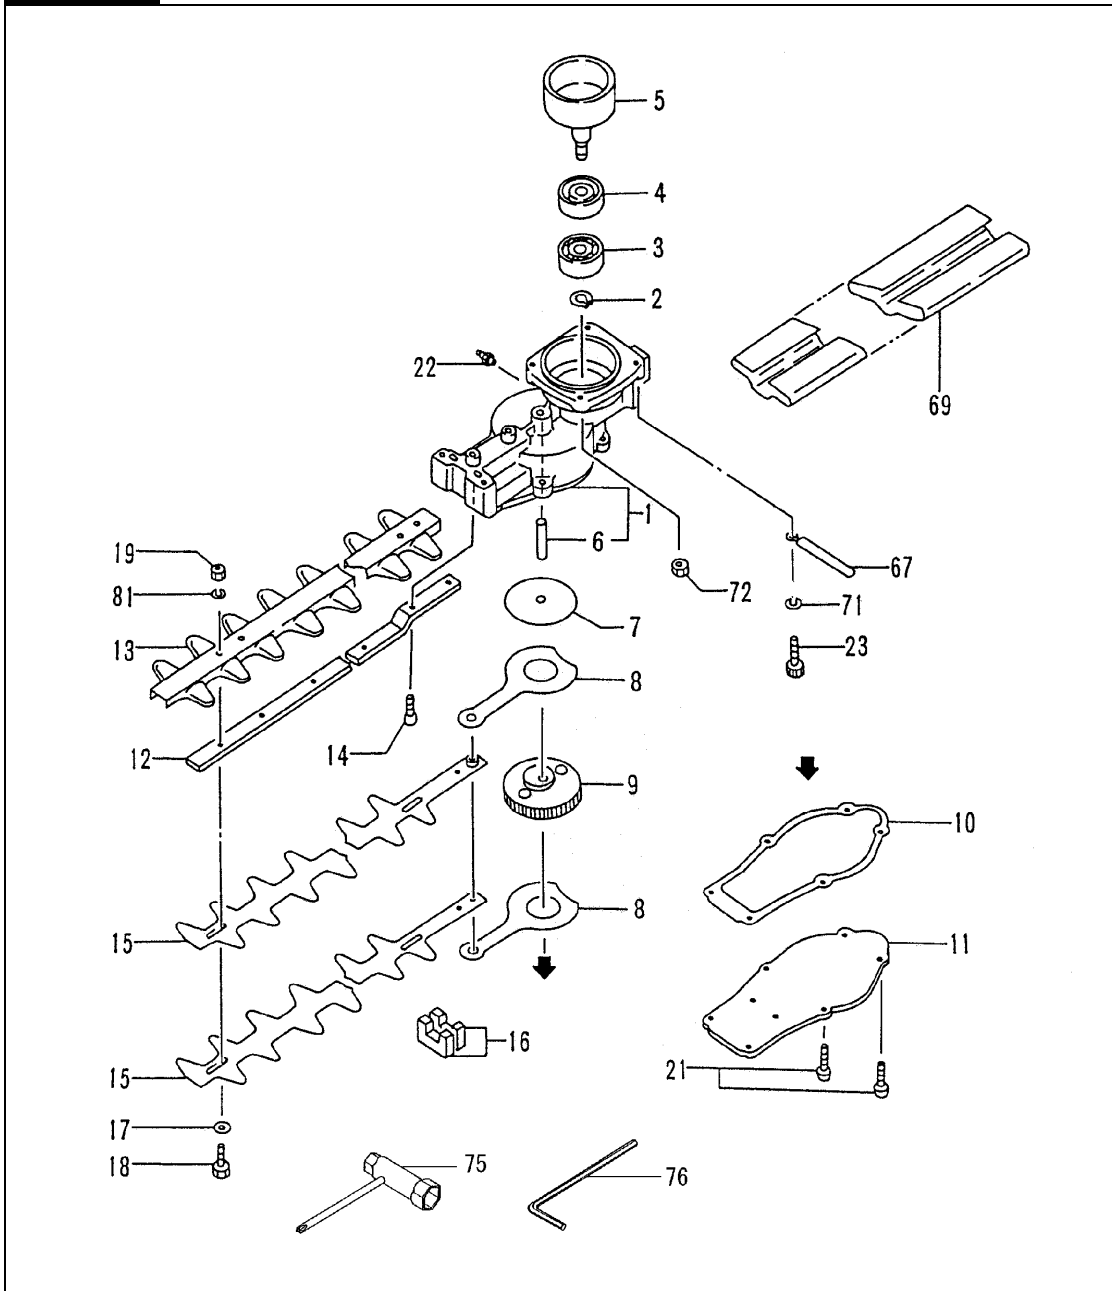

REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
001	300-3317A-81	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
006	305-33160-20	1	
007	075-33160-20	1	
008	101-33190-20	2	
009	307-33180-20	1	
010	303-33160-20	1	
011	630-33160-20	1	
012	122-33255-20	1	
013	136-33160-20	1	
014	990-52060-165	2	
015	121-33255-22	2	
016	085-33160-20	2	
017	129-33202-20	3	
018	124-33202-21	3	
019	123-33202-20	3	
021	994-61040-104	8	
022	300-32250-80	1	
023	990-51060-143	2	
067	198-10246-80	1	
069	138-33255-20	1	
071	992-10060-012	2	
072	994-40060-011	2	
075	036-29331-50	1	
076	813-20000-20	1	
081	992-01060-011	3	