

**H01**


***Tanaka***

**THT-2100/S**

**Serien Nummer bis C087850**


# H01-01

## THT-2100/S Zylinder/ Kolben / Kurbelwelle

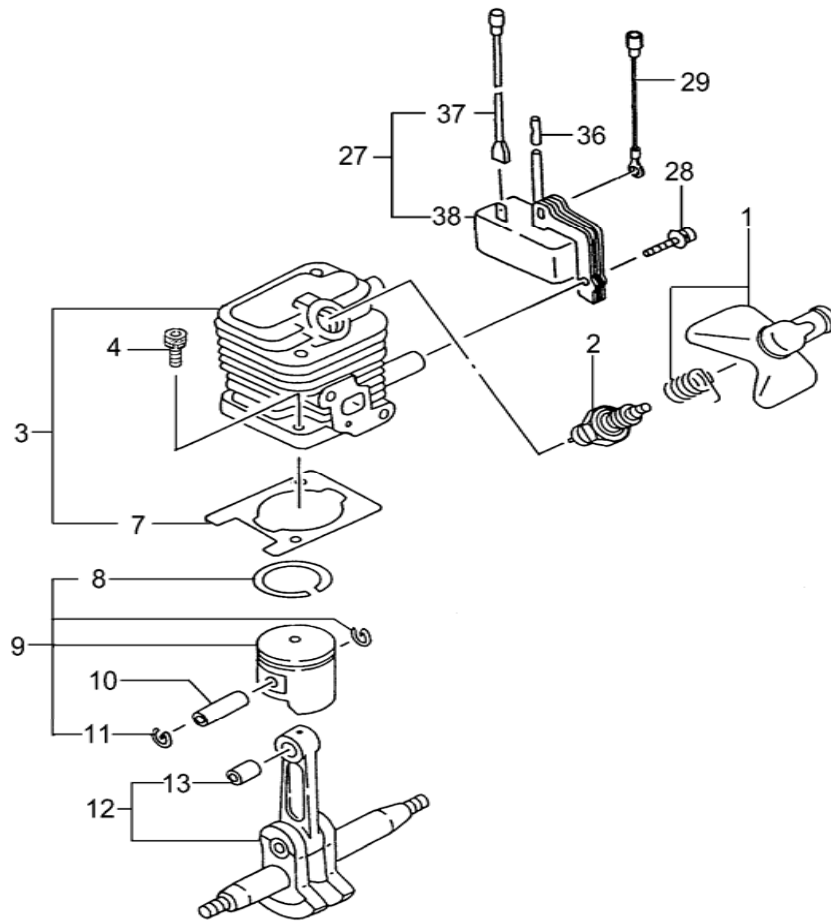


REF. NUMBER	Teile Nummer	Stk	Seriennummer
001	0 157-06500-91	1	
002	0 018-00555-20	1	
003	0 001-0650A-90	1	
004	0 994-61050-184	2	
007	0 017-06500-20	1	
008	0 041-00601-21	1	
009	0 030-06500-90	1	- Y322900
009	0 030-0650A-90	1	Y322901 -
010	0 037-06500-20	1	
011	0 039-01620-20	2	
012	0 046-06500-80	1	
013	0 999-62081-225	1	
027	0 153-21532-90	1	
028	0 994-64040-184	2	
<b>029</b>	<b>0 274-0700D-80</b>	<b>1</b>	<b>C023201 -</b>
036	0 250-06500-20	1	
037	0 178-06500-80	1	
038	167-21532-80	1	

# H01-02 THT-2100/S Kurbelgehäuse

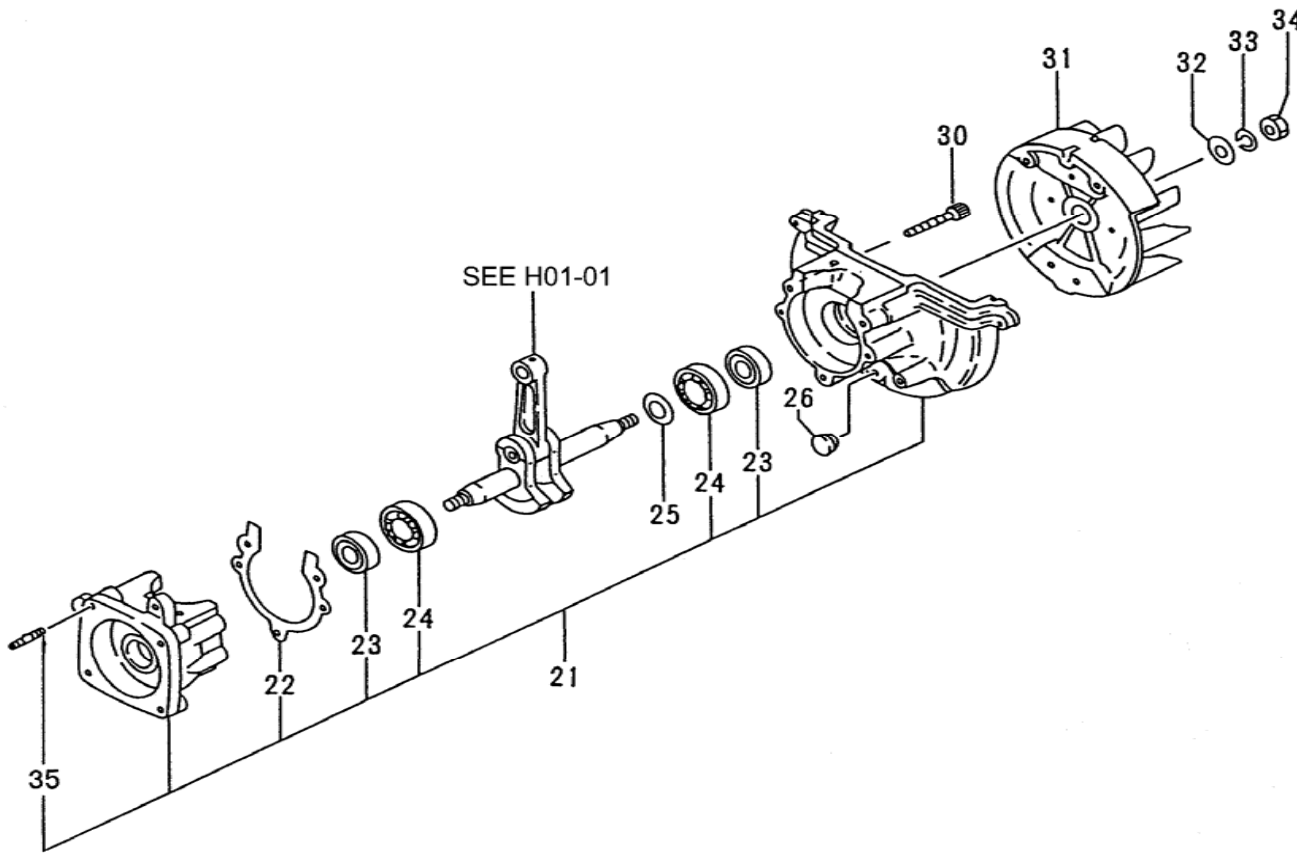


REF. NUMBER	Teile-nummer	Stk	Serien-nummer
021	072-06500-90	1	
022	090-06500-20	1	
023	999-66122-200	2	
024	999-61600-115	2	
025	330-00200-21	V	
025	330-00200-22	V	
025	330-00200-23	V	
025	330-00200-24	V	
026	599-00601-20	1	
030	994-61050-304	3	
031	155-21523-80	1	
032	992-01080-011	1	
033	992-10080-012	1	
034	991-01080-011	1	
035	100-02100-20	2	

# H01-03 THT-2100/S Motor -1-

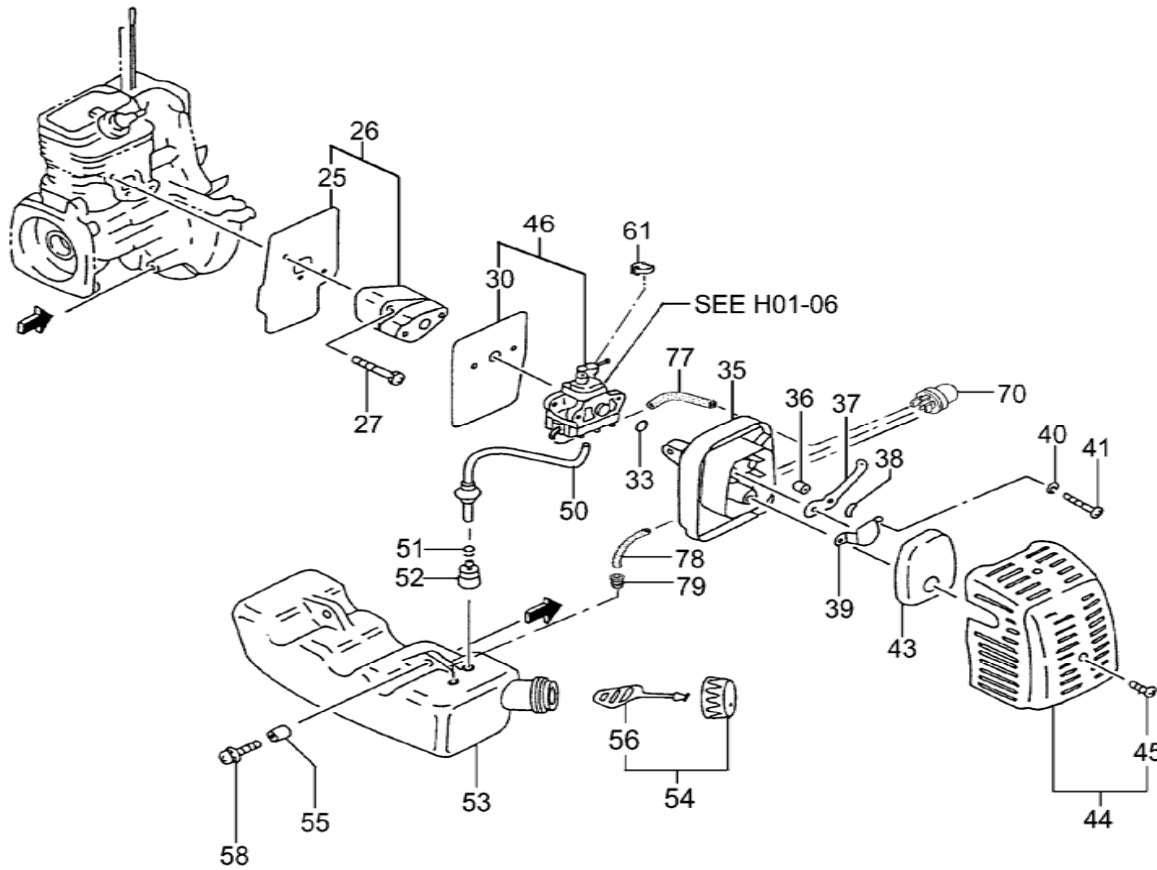


REF. NUMBER	Teile-nummer	Stk	Serien-nummer
025	403-06500-20	1	
026	404-06500-90	1	
027	994-64050-254	2	
030	402-06500-20	1	
033	999-67015-000	1	
035	423-06500-81	1	
036	470-06500-20	2	
037	528-06500-20	1	- B027100
037	528-0650T-20	1	B027101 -
038	992-04080-031	1	
039	476-01700-20	1	
040	992-10050-012	2	
041	990-11050-602	2	
043	446-06500-21	1	
044	452-06500-91	1	
045	380-0637C-20	1	
046	455-0651E-90	1	- Z295500
046	455-06504-90	1	- B027100
046	455-0651A-90	1	B027101 -
050	223-06500-90	1	
051	680-00731-20	1	
052	675-04042-80	1	
053	591-06500-21	1	- Z295500
053	591-06504-22	1	Z295501 -
054	595-00093-90	1	
055	659-00801-20	2	
056	626-32550-20	1	
058	994-63050-185	2	
061	560-07120-20	1	A088801 -
070	442-25143-80	1	Z295501 -
077	700-02504-08	1	Z295501 -
078	700-02504-07	1	Z295501 -
079	534-32710-20	1	Z295501 -

# H01-04 THT-2100 Motor -2-

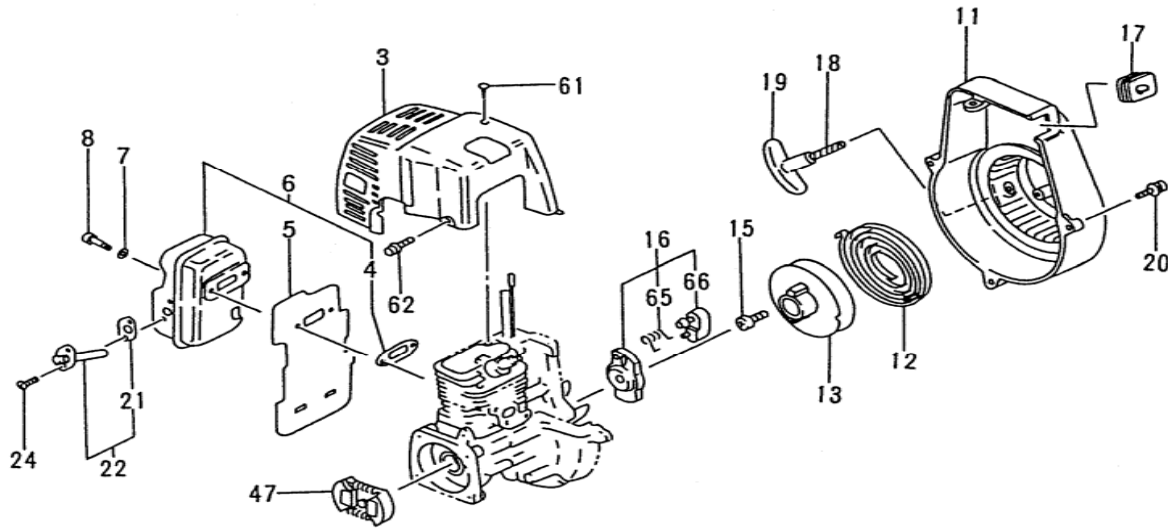

REF. NUMBER	Teile-nummer	Stk	Serien-nummer
003	738-06500-20	1	
004	737-06500-20	1	
005	133-06500-20	1	
006	704-06511-91	1	
007	992-01050-011	2	
008	990-51050-503	2	
011	112-06500-80	1	
012	780-06097-20	1	
013	774-06097-20	1	
015	839-02010-20	1	
016	798-06500-90	1	
017	203-0604A-20	1	
018	783-06097-20	1	
019	785-06410-20	1	
020	994-63040-154	3	
021	751-06500-20	1	- V147400
022	721-06500-90	1	- V147400
024	994-14040-081	2	- V147400
047	277-0634F-90	1	
061	990-72045-164	1	
062	994-25040-128	2	
065	790-06097-20	1	
066	788-06500-20	1	


# H01-05 THT-2100S Motor -2- (S-Start)

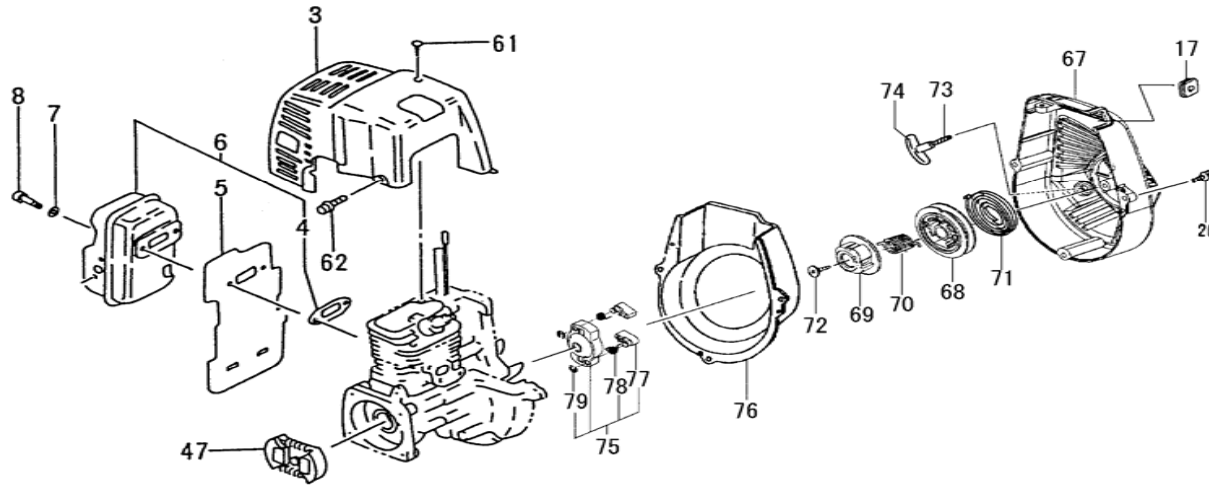

REF. NUMBER	Teile-nummer	Stk	Serien-nummer
003	738-06500-20	1	
004	737-06500-20	1	
005	133-06500-20	1	
006	704-06511-91	1	
007	992-01050-011	2	
008	990-51050-503	2	
017	203-0604A-20	1	
020	994-63040-184	3	
047	277-0634F-90	1	
061	990-72045-164	1	
062	994-25040-128	2	
067	112-0651H-80	1	
068	774-0651H-20	1	
069	759-0651H-20	1	
070	758-0651H-20	1	
071	780-06097-20	1	
072	839-03045-20	1	
073	783-0651H-20	1	
074	785-06410-20	1	
075	798-0651H-90	1	
076	132-06602-20	1	
077	788-0651H-20	2	
078	790-06097-20	2	
079	993-55050-000	2	


# H01-06

## THT-2100/S Vergaser

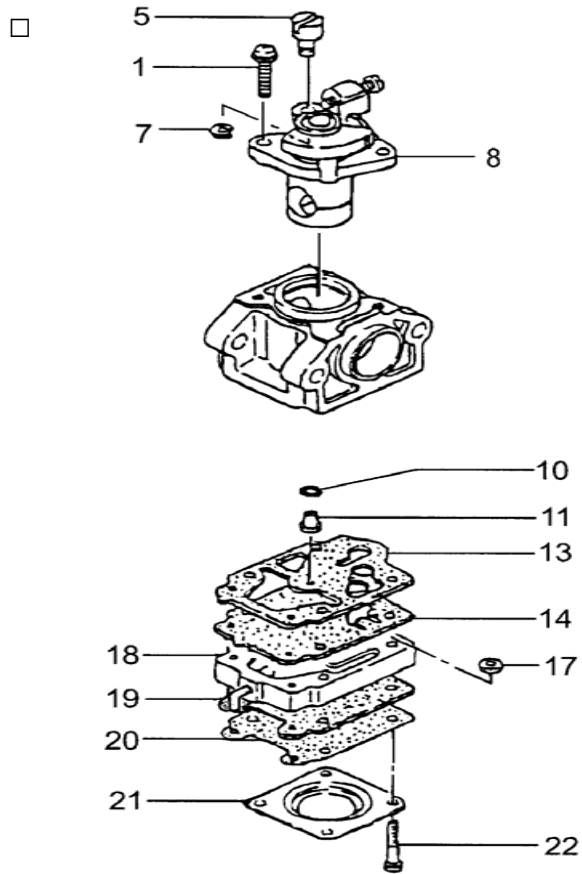

REF. NUMBER	Teile-nummer	Stk	Serien-nummer
001	548-25140-20	2	
005	539-25120-20	1	
007	489-25100-20	1	
008	488-25145-80	1	- B027100
010	550-25100-20	1	
011	599-2000W-41	1	- T227952
011	599-200AW-41	1	- Z295500
011	599-2000W-40	1	- B027100
011	599-200BW-34	1	B027101 -
013	577-25100-20	1	
014	576-25100-20	1	
017	578-25007-20	1	
018	575-25182-80	1	- T227952
018	575-25152-80	1	- Z295500
018	575-25147-80	1	Z295501 -
019	475-25001-20	1	- Z295500
019	475-25038-20	1	Z295501 -
020	474-25001-80	1	
021	476-25004-20	1	
022	548-25101-20	4	


# H01-07 THT-2100/S Griff (SERIAL NO. Bis C023200)

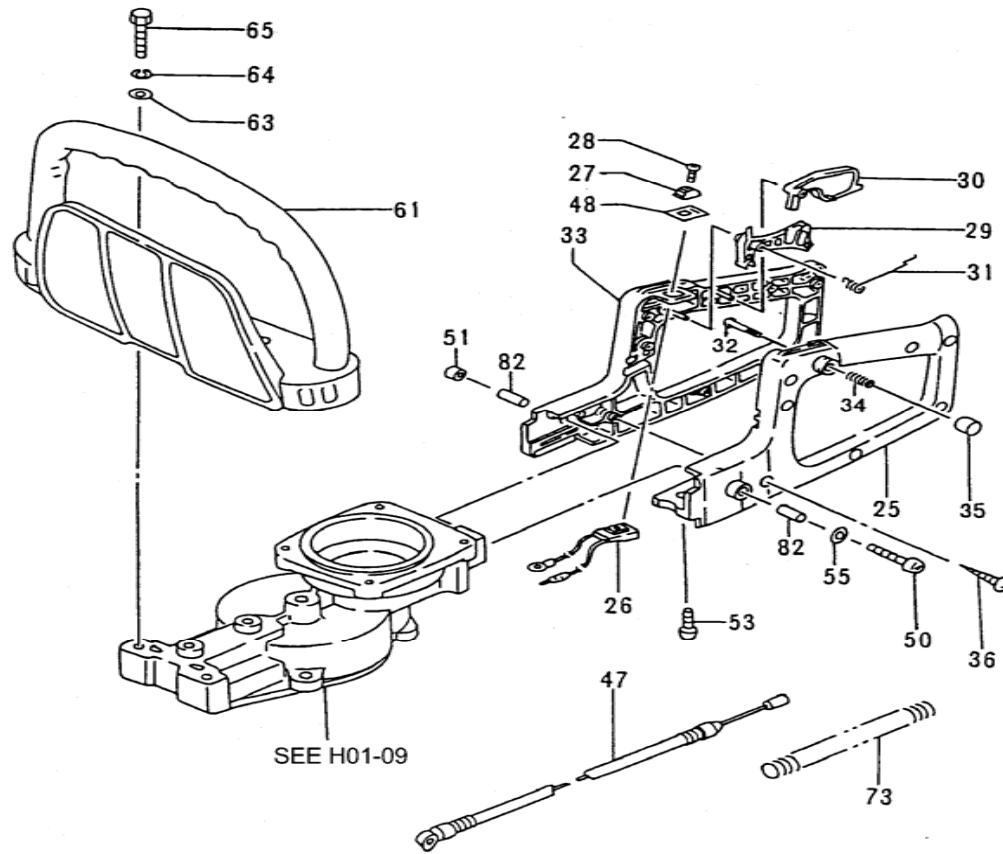


REF. NUMBER	Teile-Nummer	Stk	Serien-nummer
025	050-33150-21	1	- S001000
025	050-33150-22	1	S001001 -
026	170-3317A-80	1	
027	258-11650-20	1	
028	994-31030-101	1	
029	230-33150-20	1	
030	231-33150-20	1	
031	232-33150-20	1	
032	064-32530-20	1	T079118 -
032	064-32530-20	1	- Z295500
033	051-33150-22	1	- S001000
033	051-33150-23	1	S001001 -
034	066-32300-20	1	T079118 -
034	066-32300-20	1	- Z295500
035	765-32120-20	1	- T079117
035	725-32600-20	1	- Z295500
035	765-32120-20	1	Z295501 -
036	993-11041-812	7	
047	885-0651C-80	1	
048	925-32530-20	1	
050	994-14050-451	1	
051	991-78050-010	1	
053	994-15060-181	1	
055	992-00050-011	1	
061	210-33160-22	1	
063	992-01050-061	2	- W042166
063	368-32057-20	2	W042167 -
064	992-10050-062	2	
065	990-51050-403	2	
073	164-07014-00	1	
082	659-00801-20	2	S001001 -



# H01-08 THT-2100S Griff (SERIAL NO. Ab C023201)

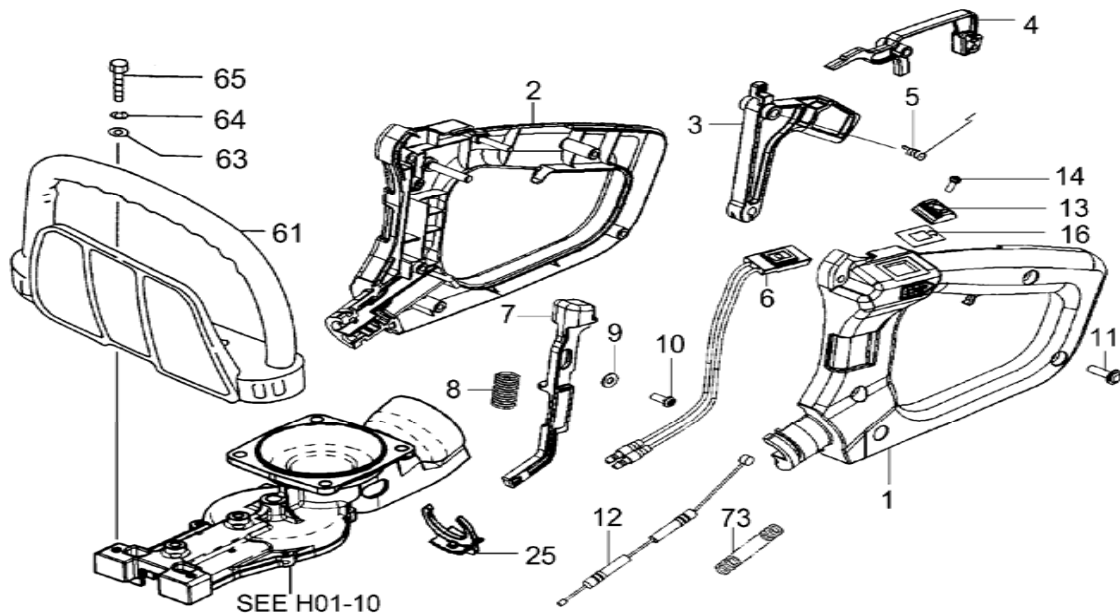


REF. NUMBER	Teile-nummer	Stk	Serien-nummer
001	051-33290-20	1	
002	050-33290-20	1	
003	230-33290-20	1	
004	231-33290-20	1	
005	232-33160-20	1	
006	170-32465-80	1	
007	233-33290-20	1	
008	245-33290-20	1	
009	992-01040-011	1	
010	993-41040-101	1	
011	990-72045-164	5	
012	885-33295-80	1	
013	258-11650-20	1	
014	994-31030-101	1	
016	925-33160-20	1	
025	505-33290-20	1	
061	210-33160-22	1	
063	368-32057-20	2	
064	992-10050-062	2	
065	990-51050-403	2	
073	164-07013-01	1	

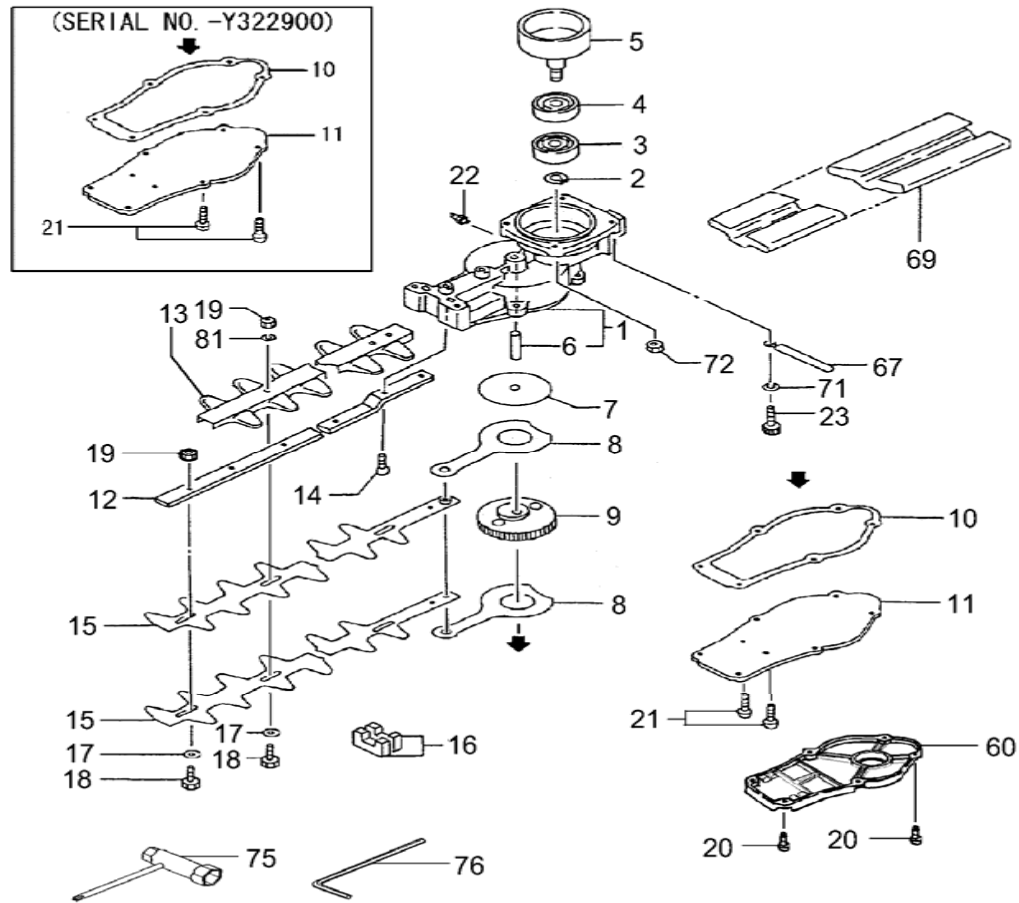

REF. NUMBER	Teile-nummer	Stk	Serien-nummer
001	300-3317A-80	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
006	305-33160-20	1	
007	075-33160-20	1	
008	101-33190-20	2	
009	307-33180-20	1	
010	303-33160-20	1	
011	630-33160-20	1	
012	122-33160-21	1	
013	136-33160-20	1	
014	990-52060-165	2	
015	120-33160-22	2	
016	085-33160-20	2	
017	129-33202-20	4	
018	124-33202-21	4	
019	123-33202-20	4	
020	994-61040-124	6	Y322901 -
021	994-61040-104	8	- Y322900
021	994-61040-104	2	Y322901 -
022	300-32250-80	1	
023	990-51060-143	2	
060	301-33160-21	1	Y322901 -
067	198-05015-80	1	
069	138-33168-20	1	
071	992-10060-012	2	
072	994-40060-011	2	
075	036-29331-50	1	
076	813-20000-20	1	
081	992-01060-011	3	

# H01-10 THT-2100/S Getriebe & Messer ab (Z295501)

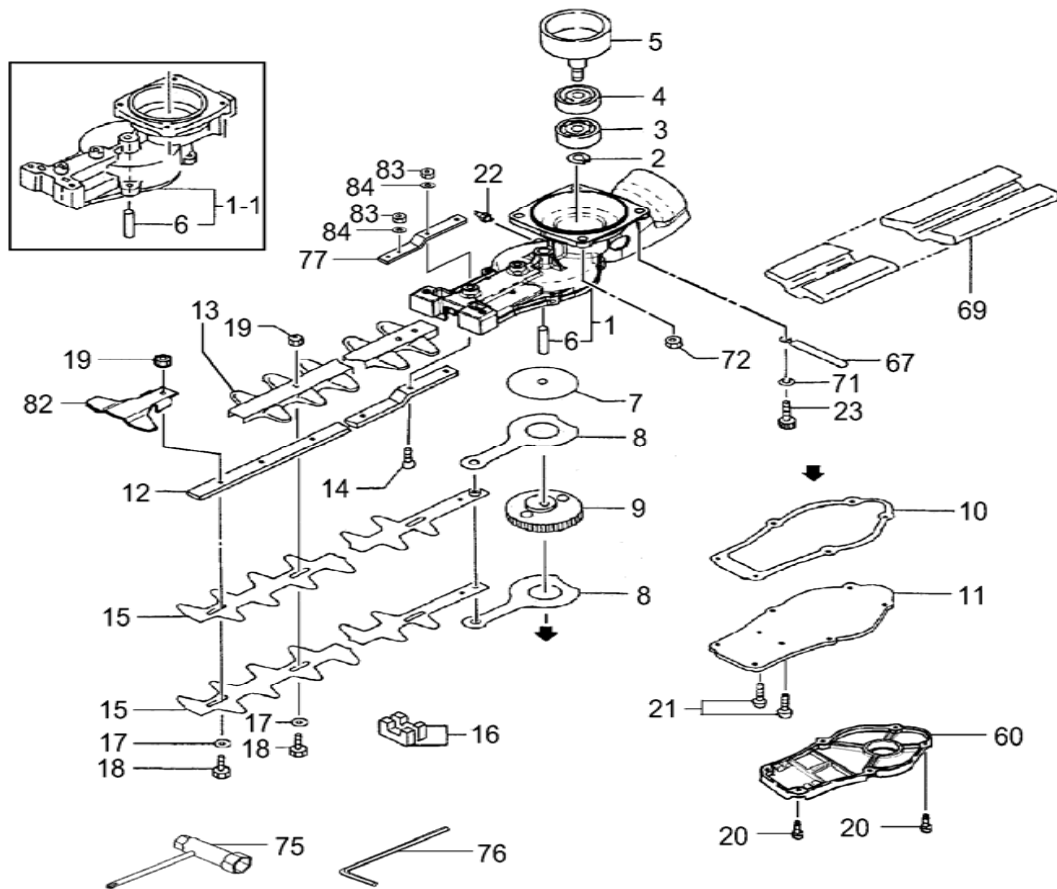

REF. NUMBER	Teile-nummer	Stk	Serien-nummer
001,1	300-3317A-81	1	- C023200
001	300-73050-80	1	C023201 -
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
006	305-33160-20	1	
007	075-33160-20	1	
008	101-33190-20	2	
009	307-33180-20	1	
010	303-33160-20	1	
011	630-33160-20	1	
012	122-33178-20	1	
013	136-33160-20	1	
014	990-52060-165	2	- A247700
014	990-52060-255	2	A247701 -
015	120-33160-22	2	
016	085-33160-20	2	
017	129-33202-20	4	
018	124-32287-20	4	
019	991-82060-001	4	- A247700
019	991-82060-001	3	A247701 -
020	994-61040-124	6	
021	994-61040-104	2	
022	300-32250-80	1	
023	990-51060-143	2	- A088800
023	994-61060-184	2	A088801 -
060	301-33160-21	1	
067	198-10246-80	1	
069	138-33168-20	1	
071	992-10060-012	2	- A088800
072	994-40060-011	2	
075	036-29331-50	1	
076	813-20000-20	1	
077	462-33295-21	1	A247701 -
082	135-33191-20	1	
083	991-87060-001	3	A247701 -
084	992-01060-011	3	A247701 -