


H02

Tanaka

THT-210/B


-Z360000

H02-01 THT-210/B CYLINDER/PISTON/CRANK SHAFT

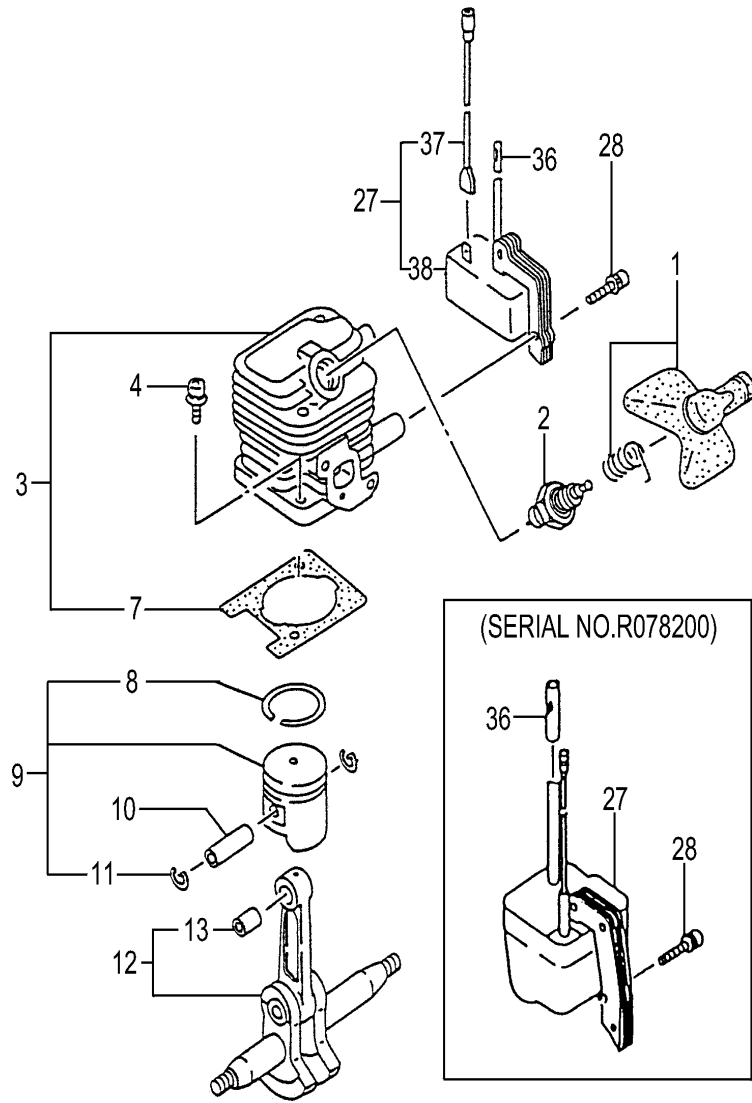


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	157-06500-91	1	
002	018-00555-20	1	
003	001-06500-90	1	- V232300
003	001-0650A-90	1	V232301 -
004	994-16050-201	2	
007	017-06500-20	1	
008	041-00601-21	1	
009	030-06500-90	1	- V232300
009	030-0650A-90	1	V232301 -
010	037-06500-20	1	
011	039-01620-20	2	
012	046-06500-80	1	
013	999-62081-225	1	
027	153-21532-90	1	
028	994-16040-186	2	
036	250-06500-20	1	
037	178-06500-80	1	R078201 -
038	167-21532-80	1	R078201 -

H02-02 THT-210/B CRANK CASE

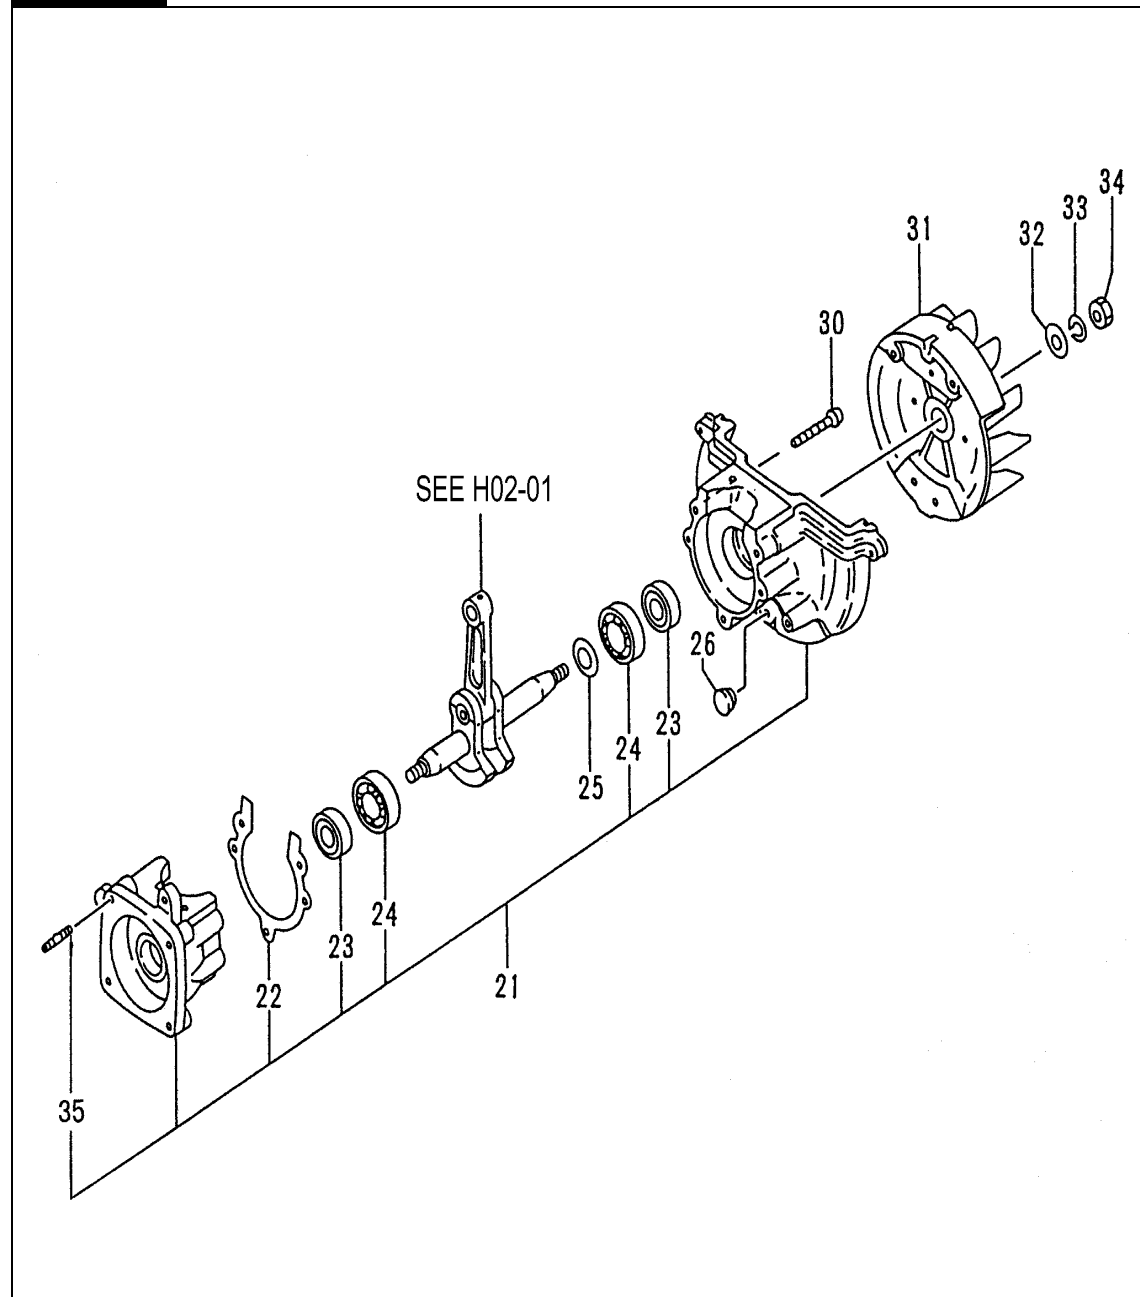


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
021	072-06500-90	1	
022	090-06500-20	1	
023	999-66122-200	2	
024	999-61600-115	2	
025	330-00200-21	V	
025	330-00200-22	V	
025	330-00200-23	V	
025	330-00200-24	V	
026	599-00601-20	1	
030	994-14050-301	3	
031	155-21523-80	1	
032	992-01080-011	1	
033	992-10080-012	1	
034	991-01080-011	1	
035	100-02100-20	2	

H02-03 THT-210/B ENGINE-1

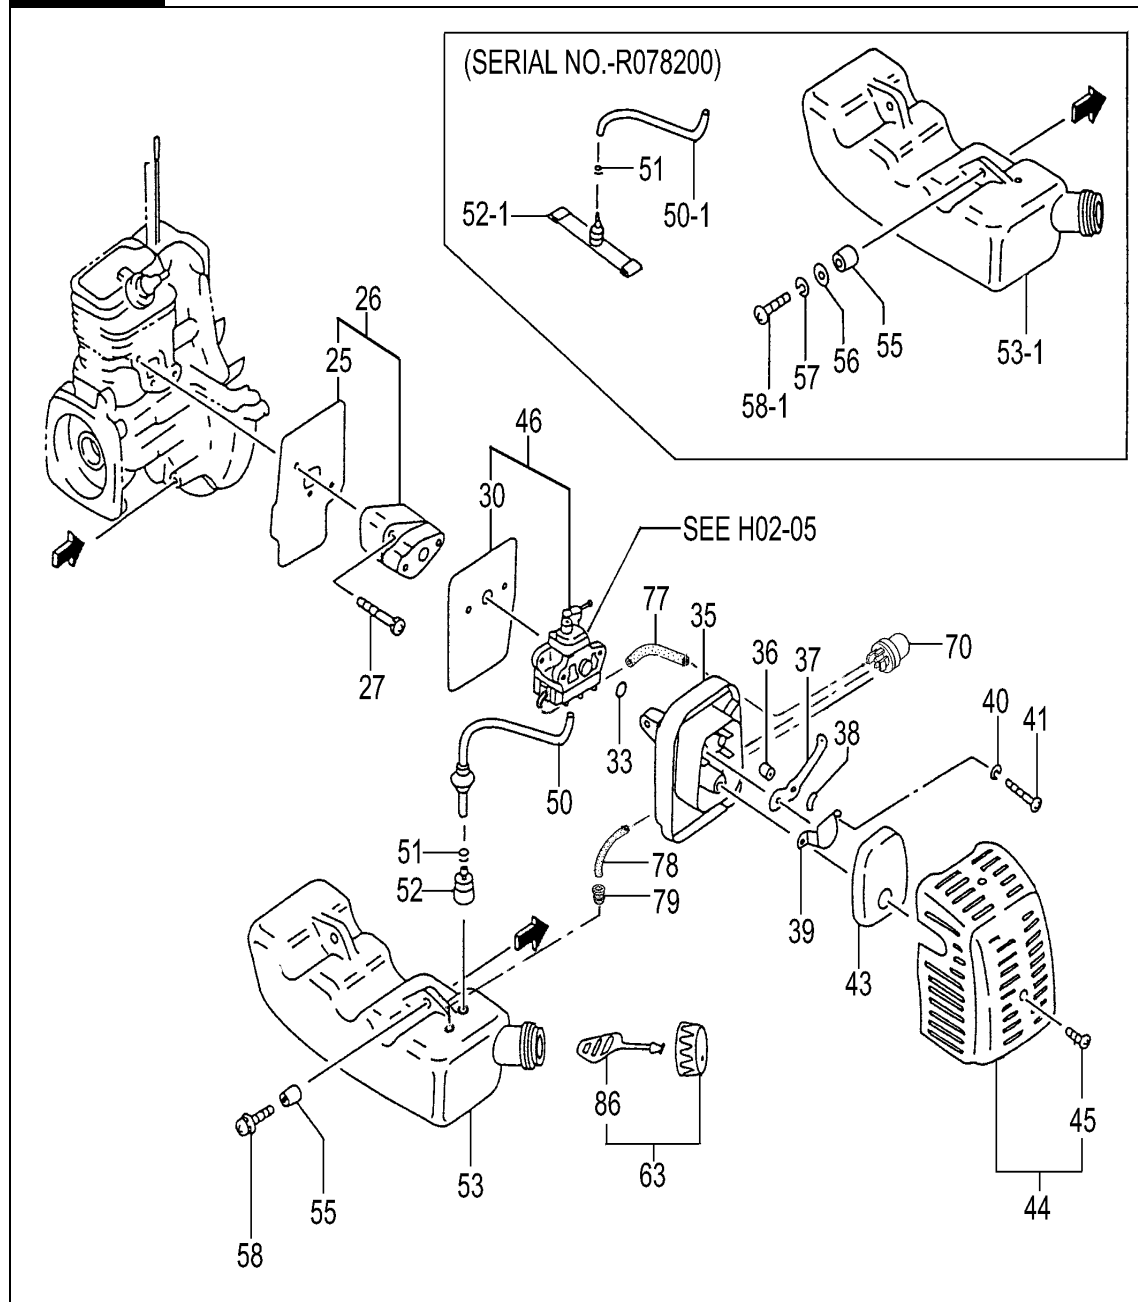


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
025	403-06500-20	1	
026	404-06500-90	1	
027	994-16050-252	2	
030	402-06500-20	1	
033	999-67015-000	1	
035	423-06500-81	1	
036	470-06500-20	2	
037	528-0650T-20	1	- U091000
037	528-06500-20	1	U091001 -
038	992-04080-031	1	
039	476-01700-20	1	
040	992-10050-012	2	
041	990-11050-602	2	
043	446-06500-21	1	
044	452-06500-91	1	
045	380-0637C-20	1	
046	455-0651E-90	1	- U091000
046	455-06504-90	1	U091001 -
050,1	700-13005-11	1	- P003885
050,1	700-53005-13	1	- R078200
050	223-06500-90	1	R078201 -
051	680-00731-20	1	
052,1	675-0641E-90	1	- P003885
052	675-04042-80	1	P003886 -
053,1	591-06500-20	1	- R078201
053	591-06500-21	1	- U091000
053	591-06504-21	1	U091001 -
055	659-00801-20	2	
056	992-01050-011	2	- L265300
057	992-10050-012	2	- L265300
058,1	990-11050-181	2	- L265300
058	994-63050-185	2	L265301 -
063	595-00093-90	1	
070	442-25143-80	1	U091001 -
077	700-02504-08	1	U091001 -
078	700-02504-06	1	U091001 -
079	534-32710-20	1	U091001 -
086	626-32550-20	1	

H02-04 THT-210/B ENGINE-2

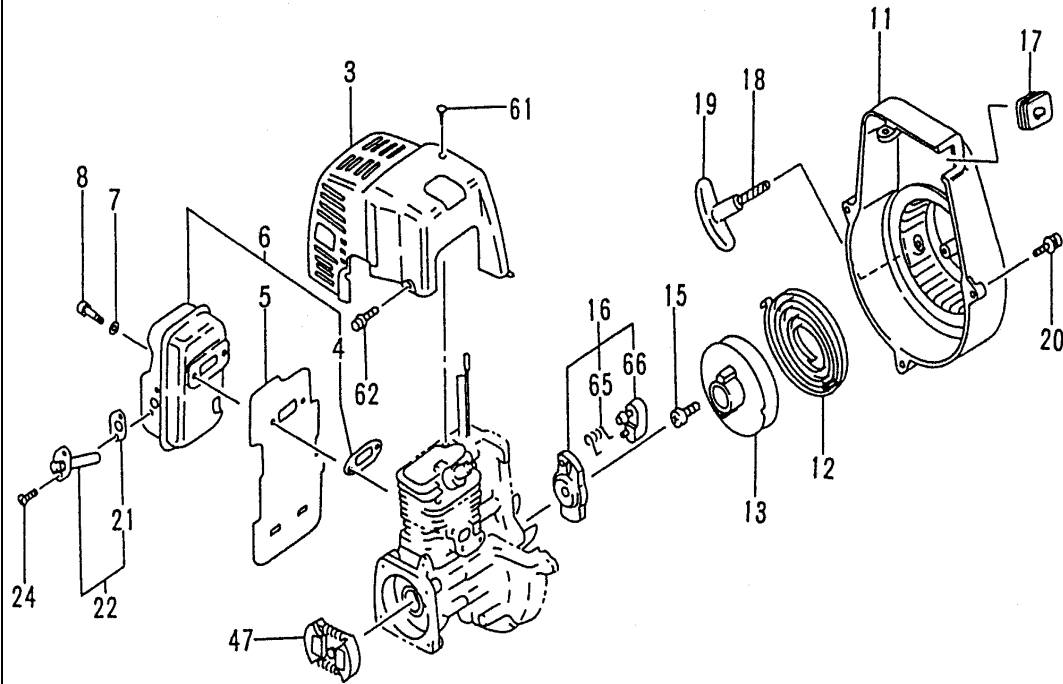


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
003	738-06500-20	1	
004	737-06500-20	1	
005	133-06500-20	1	
006	704-06504-91	1	
007	992-01050-011	2	
008	990-51050-503	2	
011	112-06500-80	1	
012	780-06097-20	1	
013	774-06097-20	1	
015	839-02010-20	1	
016	798-06500-90	1	
017	203-0604A-20	1	
018	783-06097-20	1	
019	785-06410-20	1	
020	994-15040-162	3	
021	751-06500-20	1	- V148600
022	721-06504-90	1	- V148600
024	994-14040-081	2	- V148600
047	277-0634F-90	1	
061	990-72045-164	1	
062	994-25040-128	2	
065	790-06097-20	1	
066	788-06500-20	1	

H02-05 THT-210/B CARBURETOR

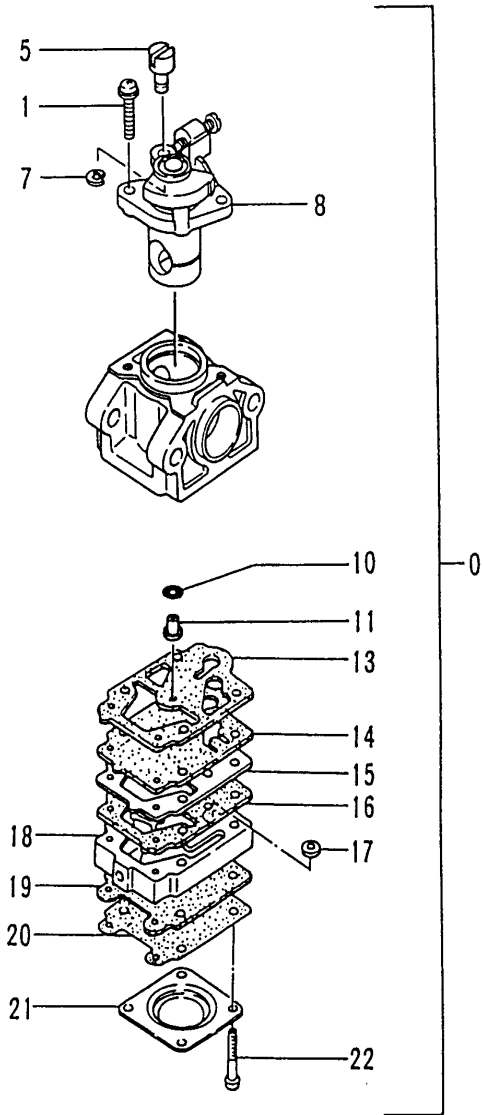


REF. NUMBER	PARTS NUMBER	QTY	SERIAL NUMBER
000	455-25145-90	1	- S238370
001	548-25140-20	2	
005	539-25120-20	1	
007	489-25100-20	1	
008	488-25145-80	1	
010	550-25100-20	1	
011	599-200AW-41	1	- U091000
011	599-200W-40	1	U091001 -
013	577-25100-20	1	
014	576-25100-20	1	
015	523-25100-20	1	- S238370
016	522-25100-20	1	- S238370
017	578-25007-20	1	
018	575-25140-80	1	- S238370
018	575-25152-80	1	- T023959
018	575-25147-80	1	U091001 -
019	475-25001-20	1	- U091000
019	475-25038-20	1	U091001 -
020	474-25001-80	1	
021	476-25004-20	1	
022	548-25101-20	4	

H02-06 THT-210/B FRONT HANDLE

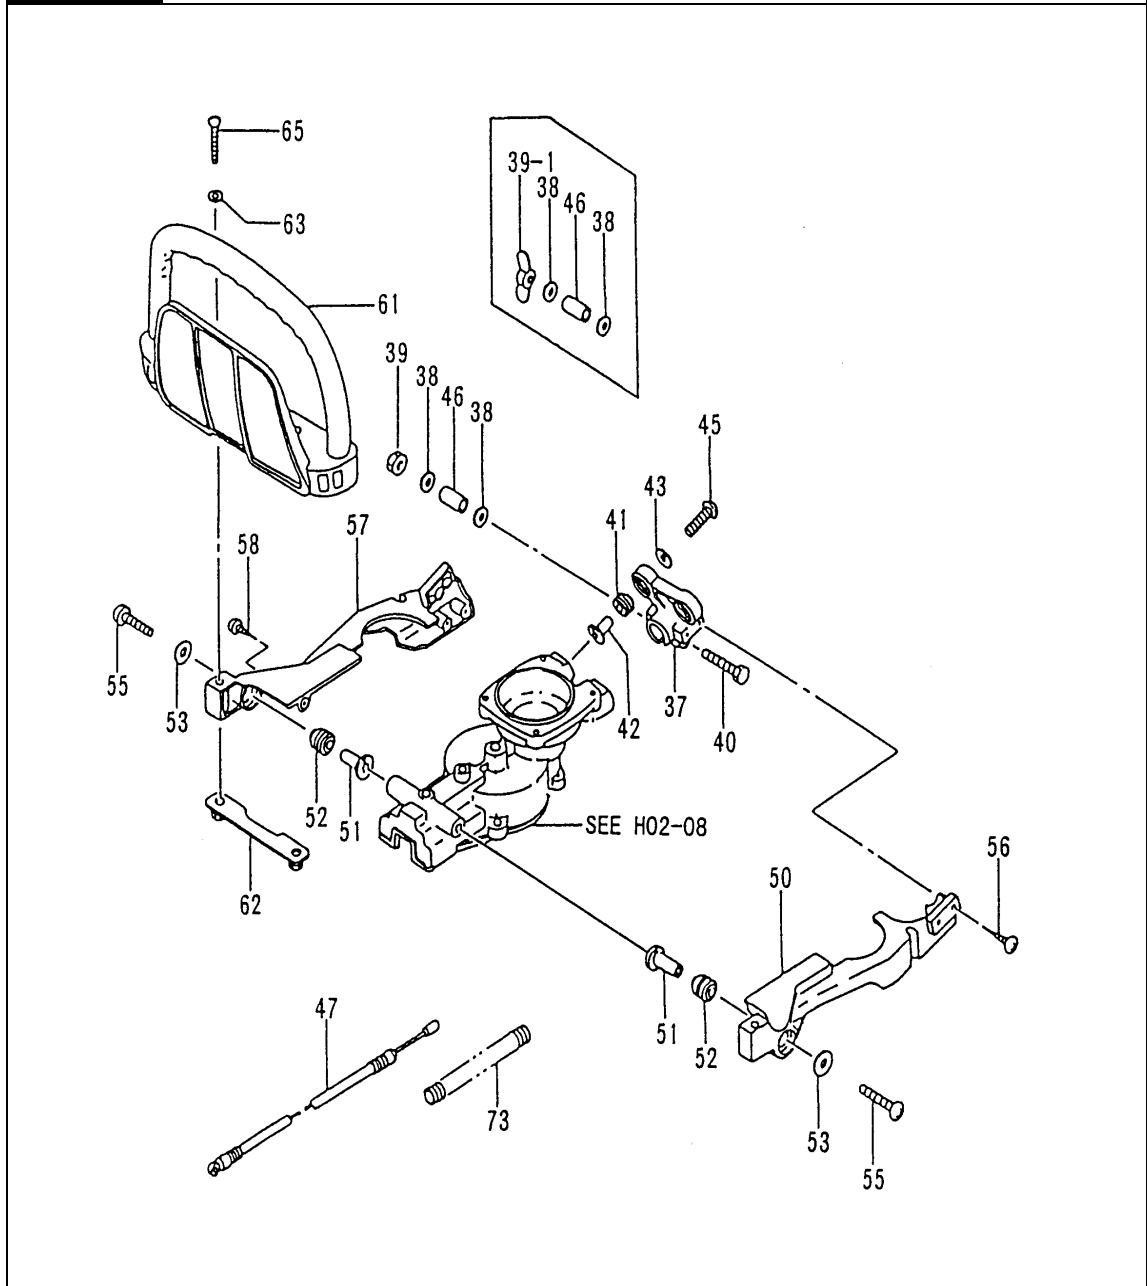


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
037	058-33160-20	1	
038	992-00060-011	2	
039,1	991-61060-011	1	- P223130
039	991-01060-011	1	P223131 -
040	990-21060-551	1	- P223130
040	990-21060-501	1	P223131 -
041	266-32750-20	2	
042	276-32710-20	2	
043	368-32057-20	2	
045	994-14050-301	2	
046	294-33160-20	1	- P223130
046	294-33160-21	1	P223131 -
047	885-06500-80	1	
050	249-33160-20	1	
051	276-32710-20	2	
052	266-32750-20	2	
053	368-32057-20	2	
055	994-14050-301	2	
056	990-73045-124	4	
057	250-33160-20	1	
058	990-73045-124	1	
061	210-33160-21	1	
062	040-33160-80	1	
063	992-01050-011	2	
065	994-14050-401	2	
073	164-07007-00	1	

H02-07 THT-210/B REAR HANDLE

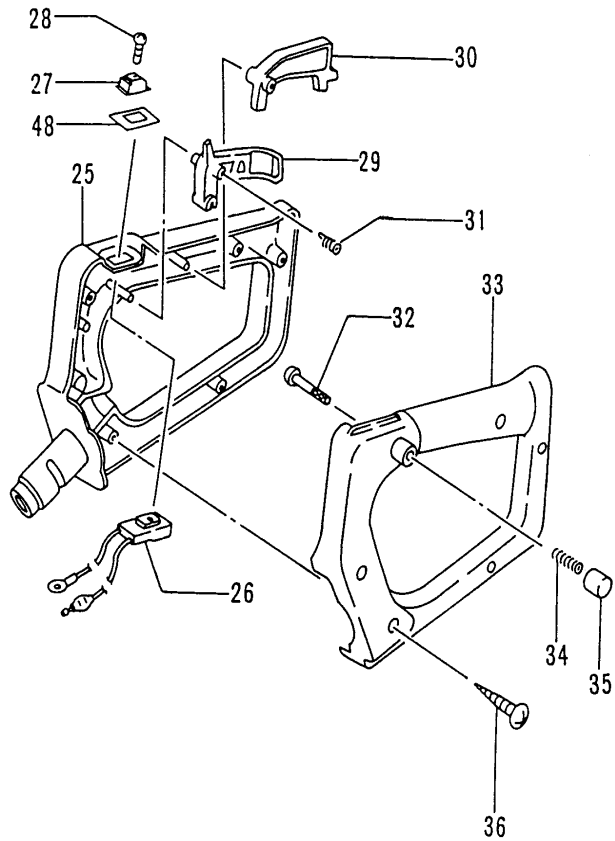


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
025	050-33160-20	1	
026	170-33160-80	1	
027	258-11600-20	1	- P103240
027	258-11650-20	1	P103241 -
028	994-31030-101	1	
029	230-33160-20	1	
030	231-33160-20	1	
031	232-33160-20	1	
032	064-32530-20	1	- P223130
032	064-32530-20	1	S273101 -
032	064-32530-20	1	- U050317
033	051-33160-20	1	
034	066-32300-20	1	- P223130
034	066-32300-20	1	S273101 -
034	066-32300-20	1	- U050317
035	725-32600-20	1	- P223130
035	765-32120-20	1	- S273100
035	725-32600-20	1	- U050317
035	765-32120-20	1	U050318 -
036	990-72045-164	6	
048	925-33160-20	1	

H02-08 THT-210/B GEAR CASE / BLADE(SERIAL NO.-Y322200

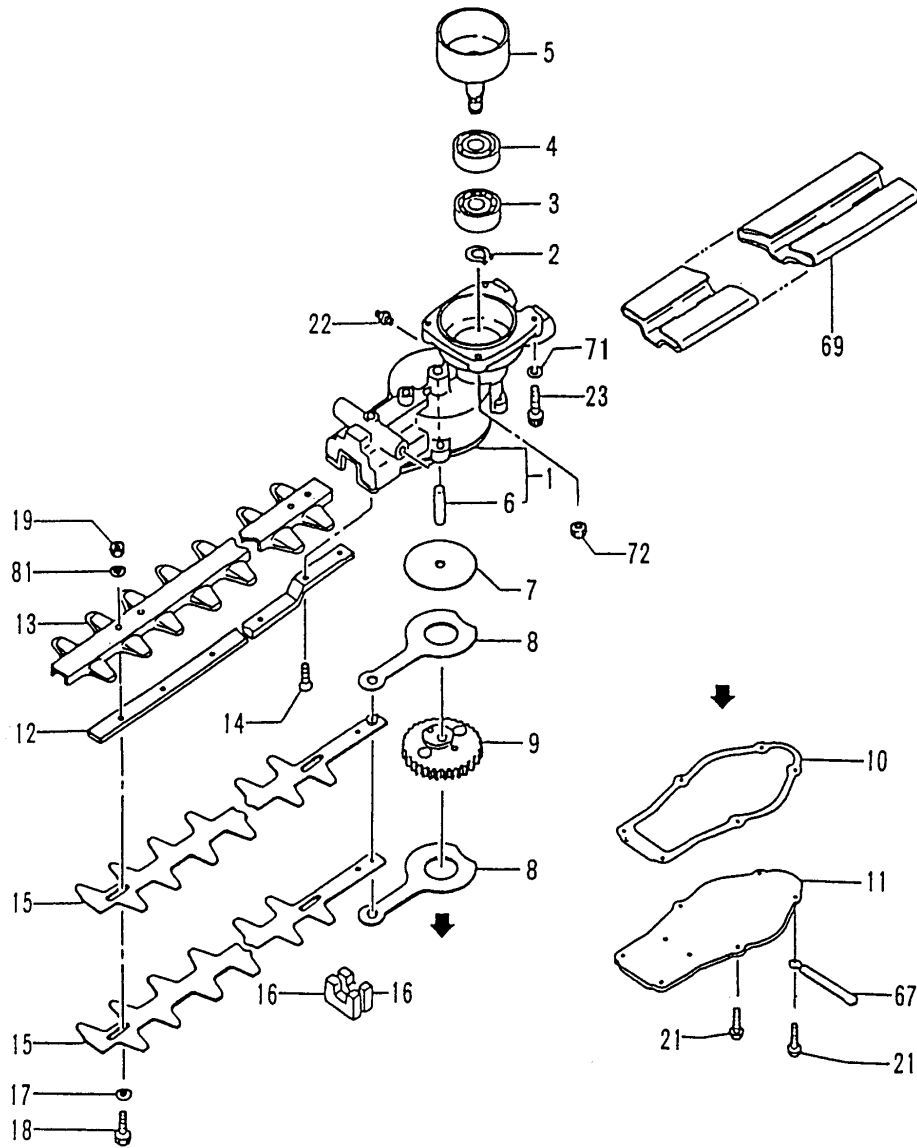


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-33160-81	1	
002	993-50014-002	1	- M164900
002	993-50015-002	1	M164901 -
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33160-80	1	- M164900
005	288-33180-80	1	M164901 -
006	305-33160-20	1	
007	075-33160-20	1	
008	101-33160-22	2	
009	307-33160-20	1	- M164900
009	307-33180-20	1	M164901 -
010	303-33160-20	1	
011	630-33160-20	1	
012	122-33160-20	1	- N068730
012	122-33168-21	1	N068731 -
013	136-33160-20	1	P223131 -
014	990-52060-165	2	
015	120-33160-20	2	- N068730
015	120-33168-21	2	N068731 -
016	085-33160-20	2	
017	129-33202-20	4	- N068730
017	129-33202-20	5	N068731 -
018	124-33202-21	4	- N068730
018	124-33202-21	5	N068731 -
019	123-33202-20	4	- N068730
019	123-33202-20	5	N068731 -
021	994-61040-104	8	
022	300-32250-80	1	
023	990-51060-143	2	
067	198-11600-80	1	
069	138-33160-20	1	- N068780
069	138-33165-20	1	- P223130
069	138-33171-20	1	P223131 -
071	992-10060-012	2	
072	994-40060-011	2	
081	992-01060-011	3	P223131 -

H02-09 THT-210/B GEAR CASE / BLADE(SERIAL NO.Y322201-

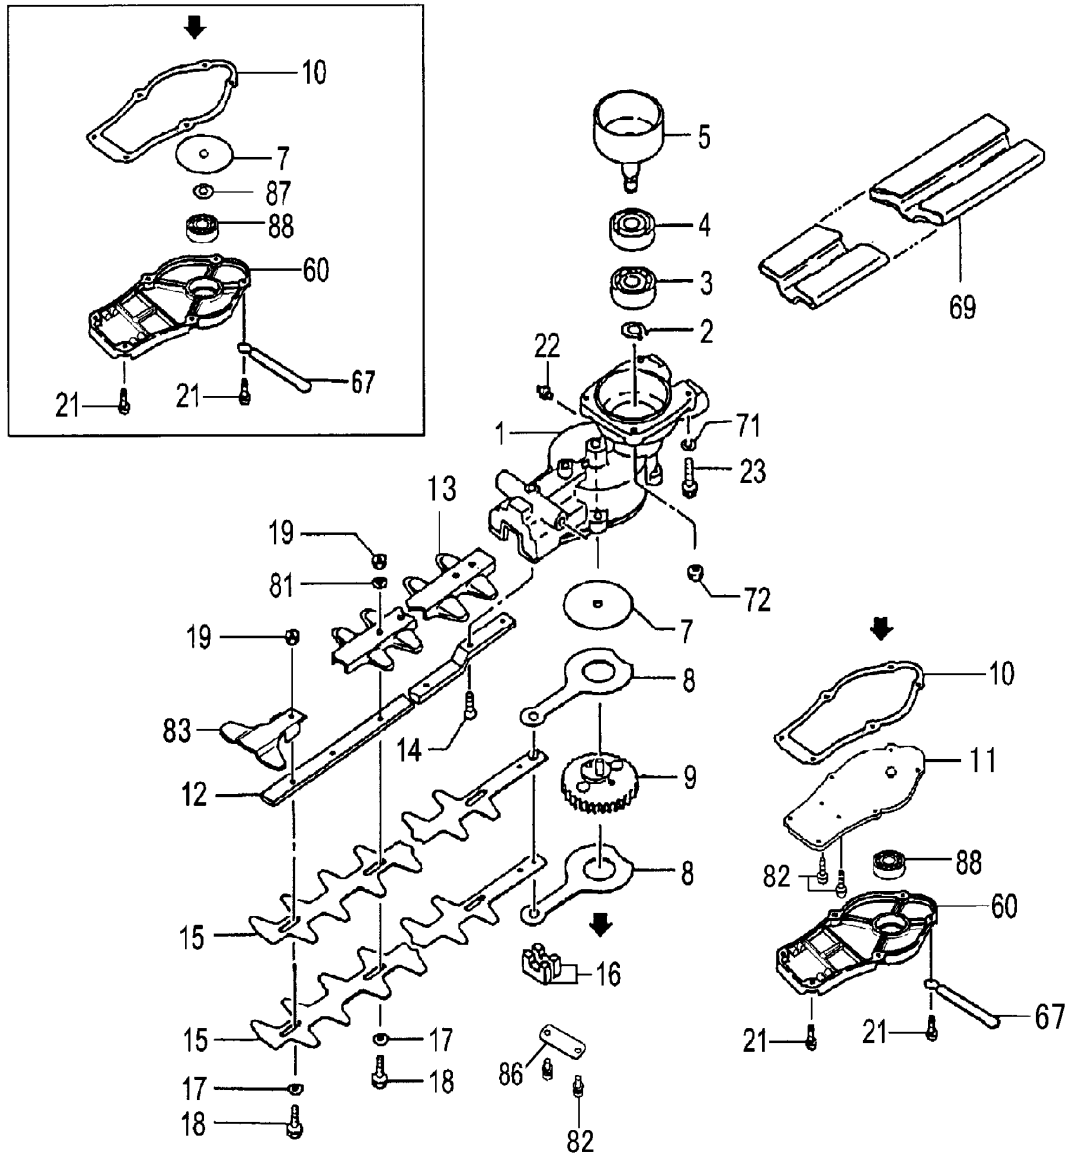

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-33194-80	1	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
007	075-33160-20	2	- Z205475
007	075-33160-20	1	Z205476 -
008	101-33190-20	2	
009	292-33194-80	1	
010	303-33160-20	1	
011	630-33165-20	1	Z205476 -
012	122-33168-21	1	- Z325000
012	122-33248-20	1	Z325001 -
013	136-33160-20	1	
014	990-52060-165	2	
015	120-33168-21	2	
016	085-33160-20	2	
017	129-33202-20	5	
018	124-33202-21	5	- Z325000
018	124-32287-20	5	Z325001 -
019	123-33202-20	5	- Z325000
019	991-82060-001	5	Z325001 -
021	994-61040-124	6	
022	300-32250-80	1	
023	990-51060-143	2	
060	301-33160-21	1	
067	198-11600-80	1	
069	138-33171-20	1	
071	992-10060-012	2	
072	994-40060-011	2	
081	992-01060-011	3	- Z325000
082	994-61040-104	2	
083	135-33191-20	1	Z205476 -
086	105-32280-20	1	- Z205475
087	034-31200-25	1	- Z205475
088	999-61608-013	1	

H02-11 THT-210/B TOOLS

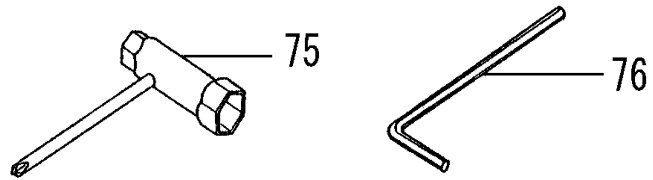

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
075	036-29331-50	1	
076	813-20000-20	1	