


H05

***Tanaka***

**THT-2510**


Serial No. -

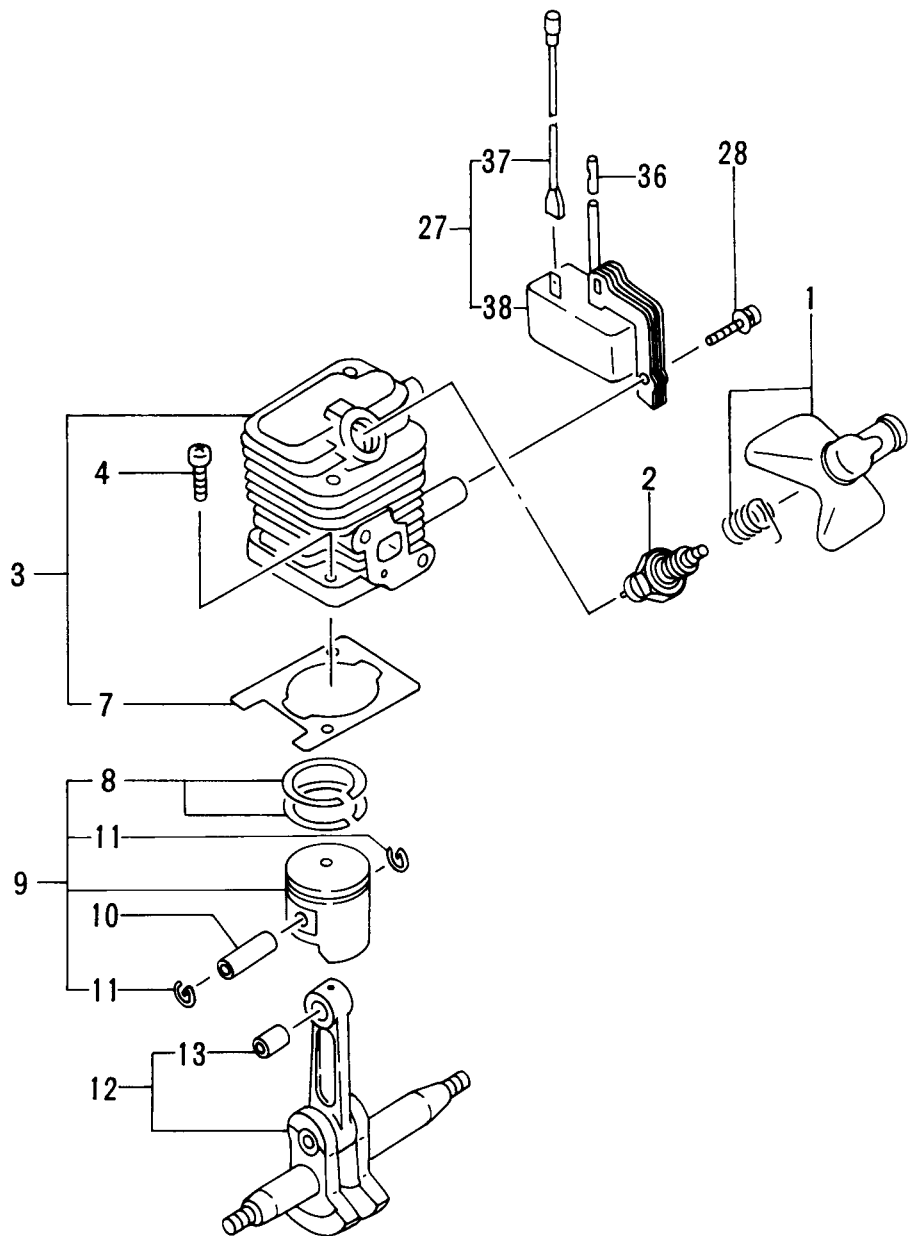

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	157-06500-91	1	
002	018-06540-21	1	
003	001-06600-90	1	
004	994-16050-201	2	
007	017-06500-20	1	
008	041-01601-20	2	
009	030-06600-90	1	
010	037-01601-20	1	
011	039-01620-20	2	
012	046-06500-80	1	
013	999-62081-225	1	
027	153-21532-90	1	
028	994-16040-226	1	
036	250-06500-20	2	
037	178-06500-80	2	
038	167-21532-80	V	

# H05-02


# THT-2510 CRANK CASE

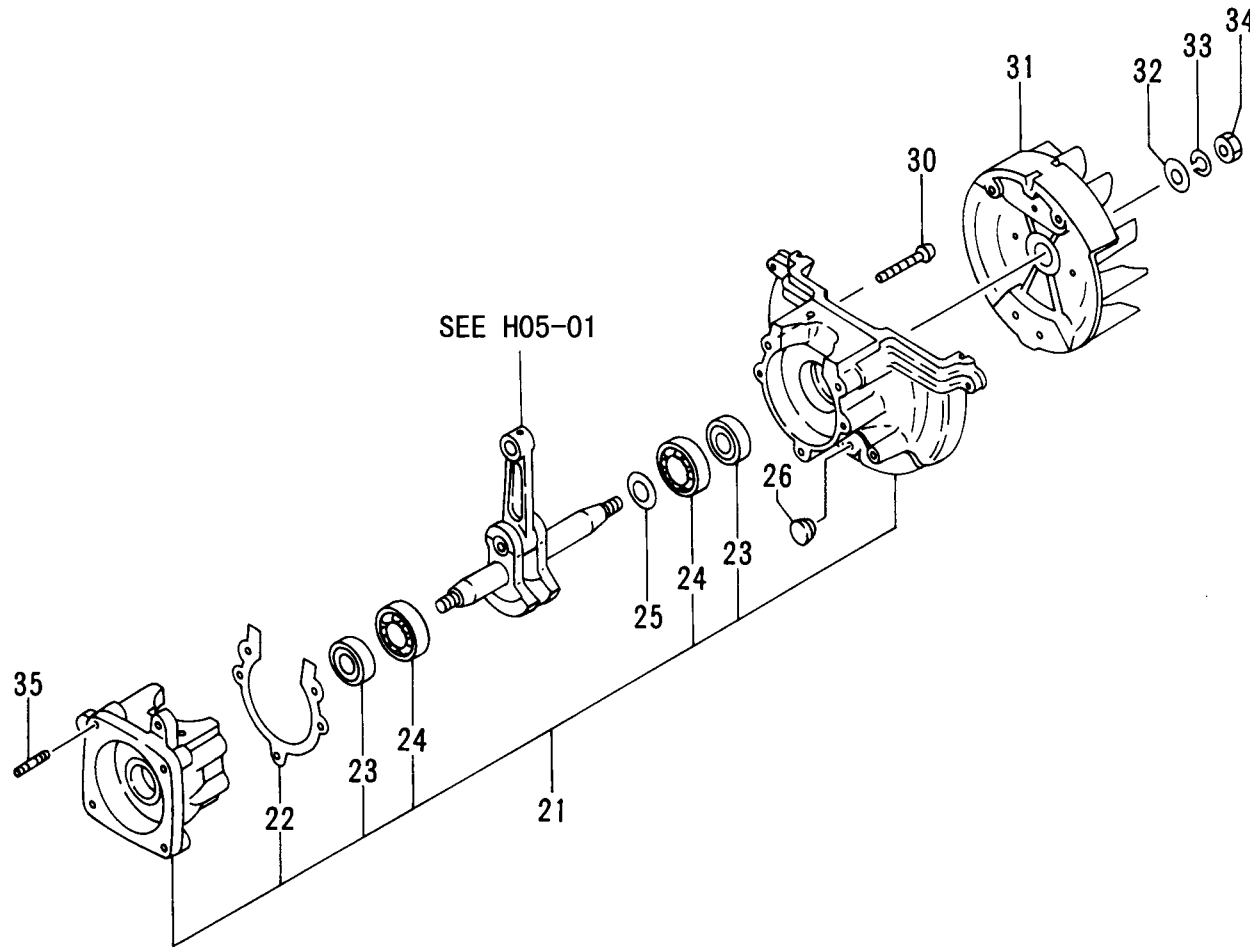


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
021	072-06500-90	V	
022	090-06500-20	V	
023	999-66122-269	V	
024	999-61600-100	1	
025	330-00200-21	1	
025	330-00200-22	2	
025	330-00200-23	3	
025	330-00200-24	1	
026	599-00601-20	1	
030	994-14050-301	1	
031	155-21523-80	1	
032	992-01080-011	2	
033	992-10080-012	1	
034	991-01080-011	1	
035	100-02100-20	1	

# H05-03

# THT-2510 ENGINE-1

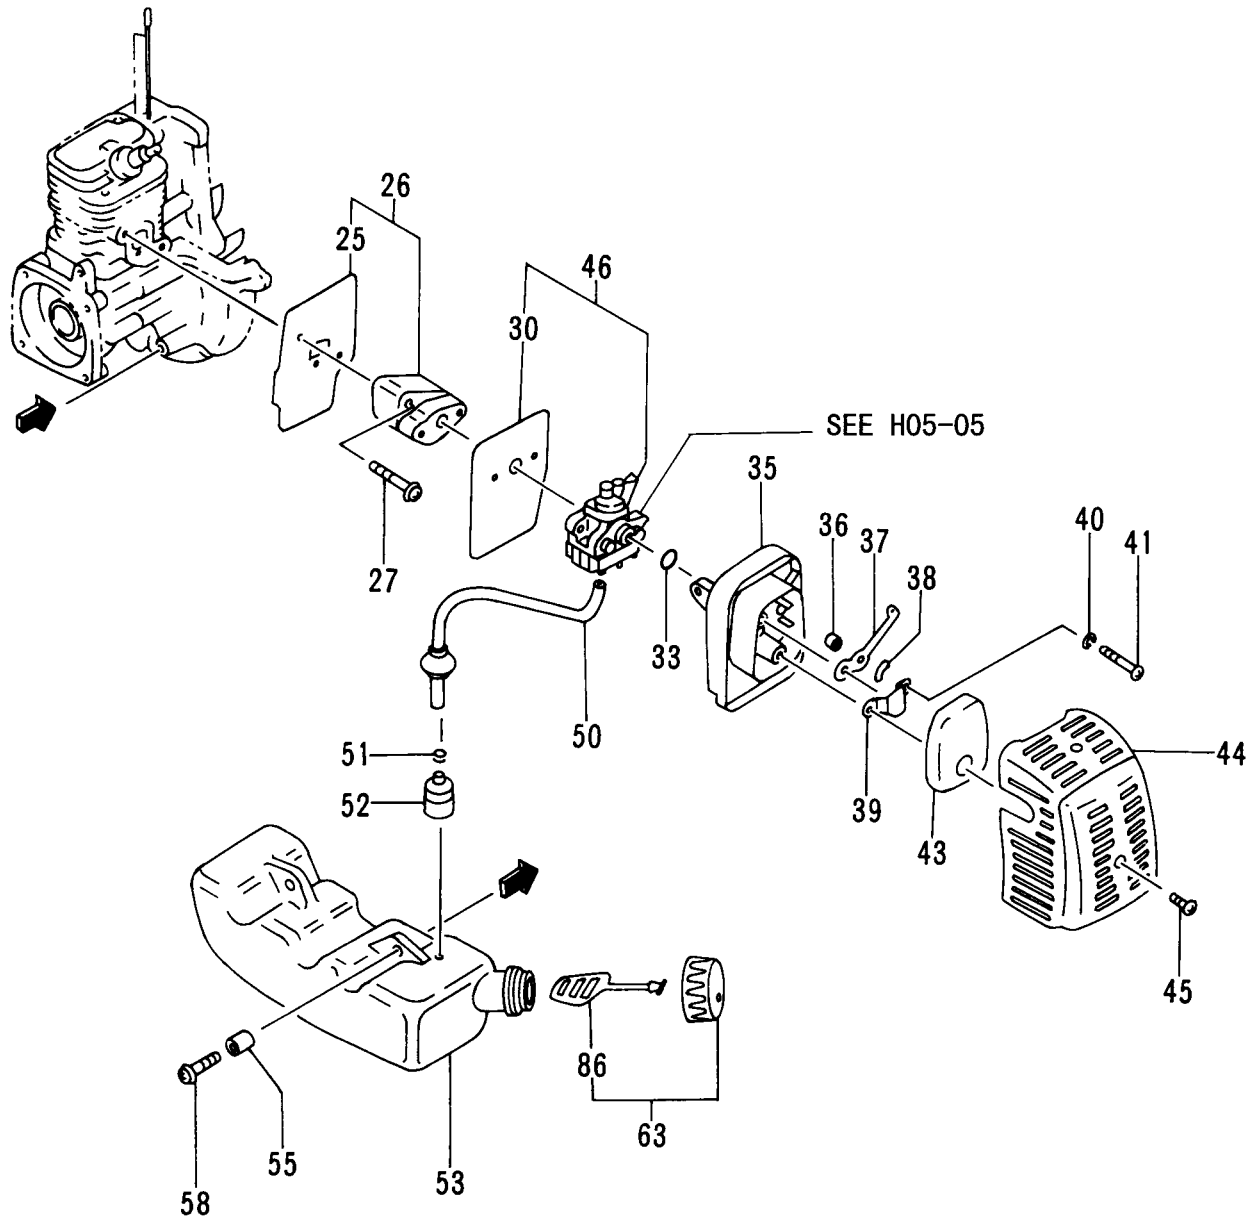



REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
025	403-06500-20	1	
026	404-06500-90	1	
027	994-16050-252	1	
030	402-06500-20	1	
033	999-67015-000	2	
035	423-06500-80	2	
036	470-06500-20	1	
037	528-06500-20	1	
038	992-04080-031	1	
039	476-01700-20	1	
040	992-10050-012	1	
041	990-11050-602	1	
043	446-06500-20	1	
044	452-06600-20	1	
045	380-0637C-20	3	
046	455-06600-90	1	
050	223-06500-90	1	
051	680-00731-20	2	
052	675-04042-80	1	
053	591-06500-21	1	
055	659-00801-20	2	
058	994-63050-185	1	
063	595-0650R-90	1	
086	626-32810-20	1	

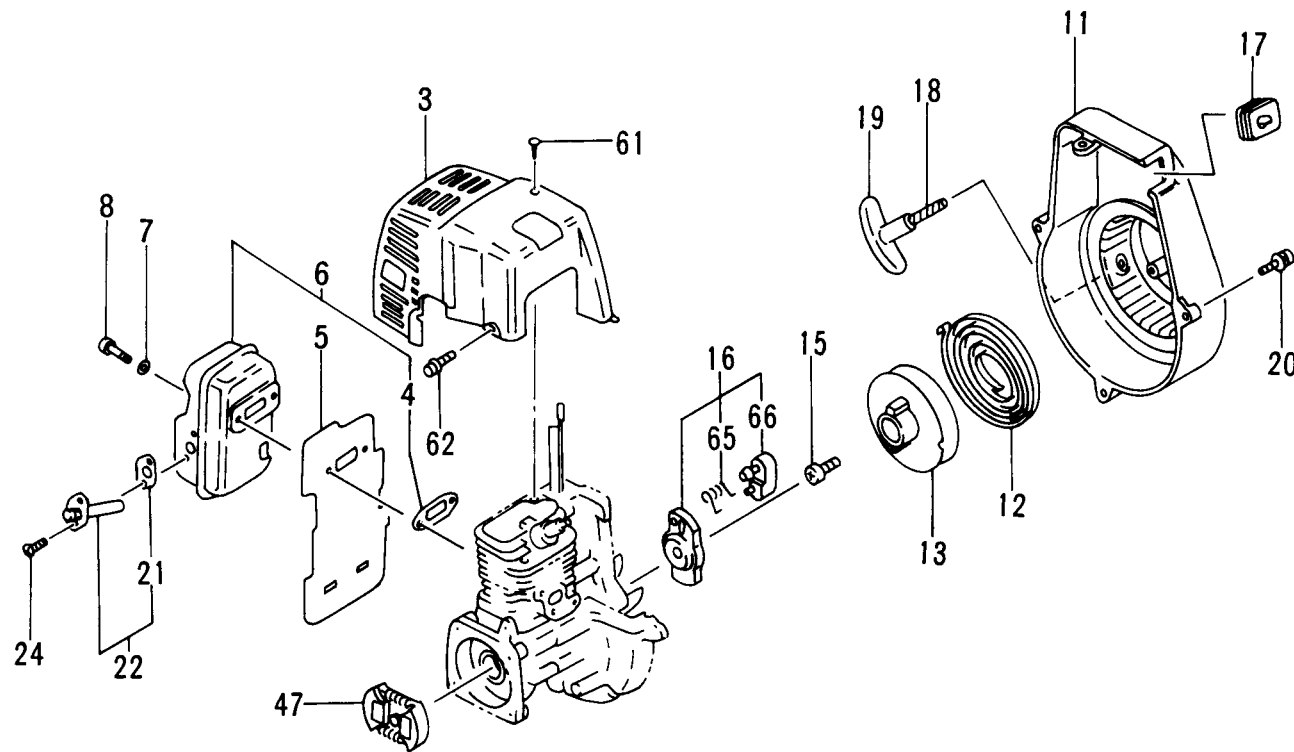

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
003	738-06500-20	1	
004	737-06500-20	2	
005	133-06500-20	1	
006	704-06500-90	1	
007	992-01050-011	1	
008	990-51050-503	2	
011	112-06500-80	2	
012	780-06097-20	1	
013	774-06097-20	1	
015	839-02010-20	1	
016	798-06500-90	1	
017	203-0604A-20	1	
018	783-06097-20	1	
019	785-06410-20	1	
020	994-15040-162	1	
021	751-06500-20	1	
022	721-06504-90	2	
024	994-14040-081	2	
047	277-0634F-90	1	
061	990-72045-164	2	
062	994-25040-128	1	
065	790-06097-20	1	
066	788-06500-20	1	

# H05-05


# THT-2510 CARBURETOR

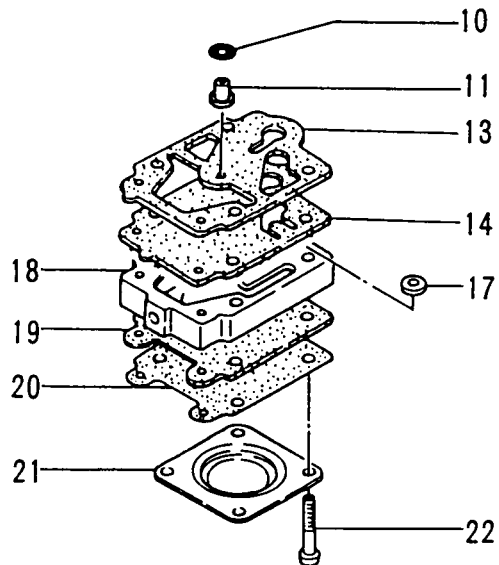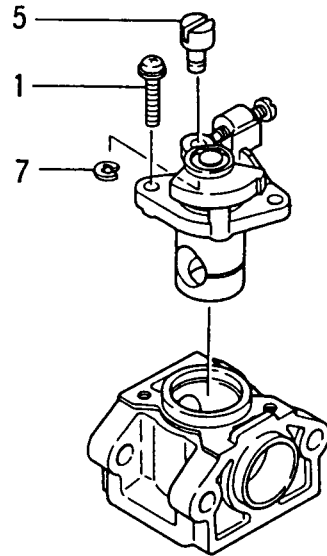

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	548-25140-20	2	
005	539-25120-20	1	
007	489-25100-20	1	
010	550-25100-20	1	
011	599-2000W-41	1	
013	577-25100-20	1	
014	576-25100-20	1	
017	578-25007-20	1	
018	575-25182-80	1	
019	475-25001-20	1	
020	474-25001-80	1	
021	476-25004-20	1	
022	548-25101-20	4	

# H05-06


# THT-2510 GEAR CASE / BLADE

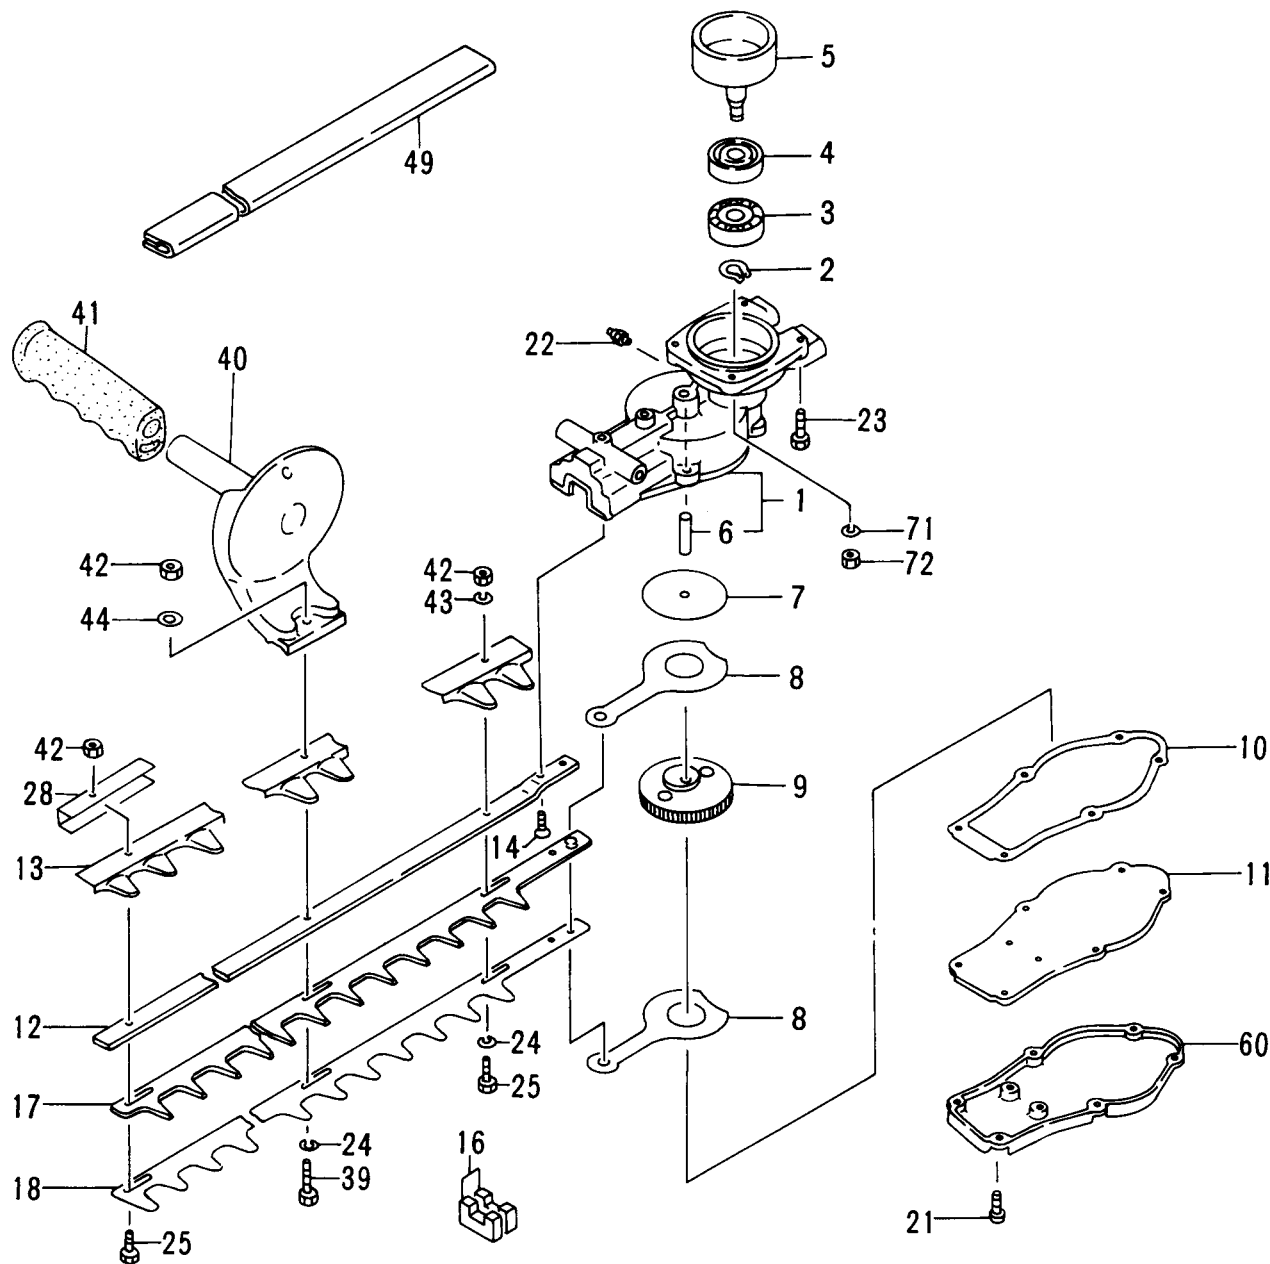


REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	300-3318B-80	2	
002	993-50015-002	1	
003	999-61600-200	1	
004	999-61600-202	1	
005	288-33180-80	1	
006	305-33160-20	1	
007	075-33160-20	2	
008	101-33190-20	2	
009	307-33180-20	1	
010	303-33160-20	1	
011	630-33160-20	6	
012	122-33180-20	1	
013	136-3318B-20	2	
014	990-52060-165	4	
016	085-33160-20	4	
017	121-3315A-20	2	
018	120-3315A-20	1	
021	994-61040-124	2	
022	300-32250-80	1	
023	990-51060-143	2	
024	129-33202-20	1	
025	124-33202-21	1	
028	128-37904-20	1	
039	125-33202-20	1	
040	051-3318B-80	1	
041	165-33130-20	5	
042	123-33202-20	4	
043	992-01060-011	1	
044	992-01060-011	1	
049	138-3318B-21	2	
060	301-33160-20	1	
071	992-10060-012	4	
072	991-01060-011	2	

**H05-07****THT-2510 HANDLE BRACKET**

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
026	994-61040-155	1	
033	990-51050-353	1	
035	057-33234-20	1	
036	060-33250-20	1	
037	058-33180-80	1	
038	176-33410-20	1	
057	994-61050-125	1	

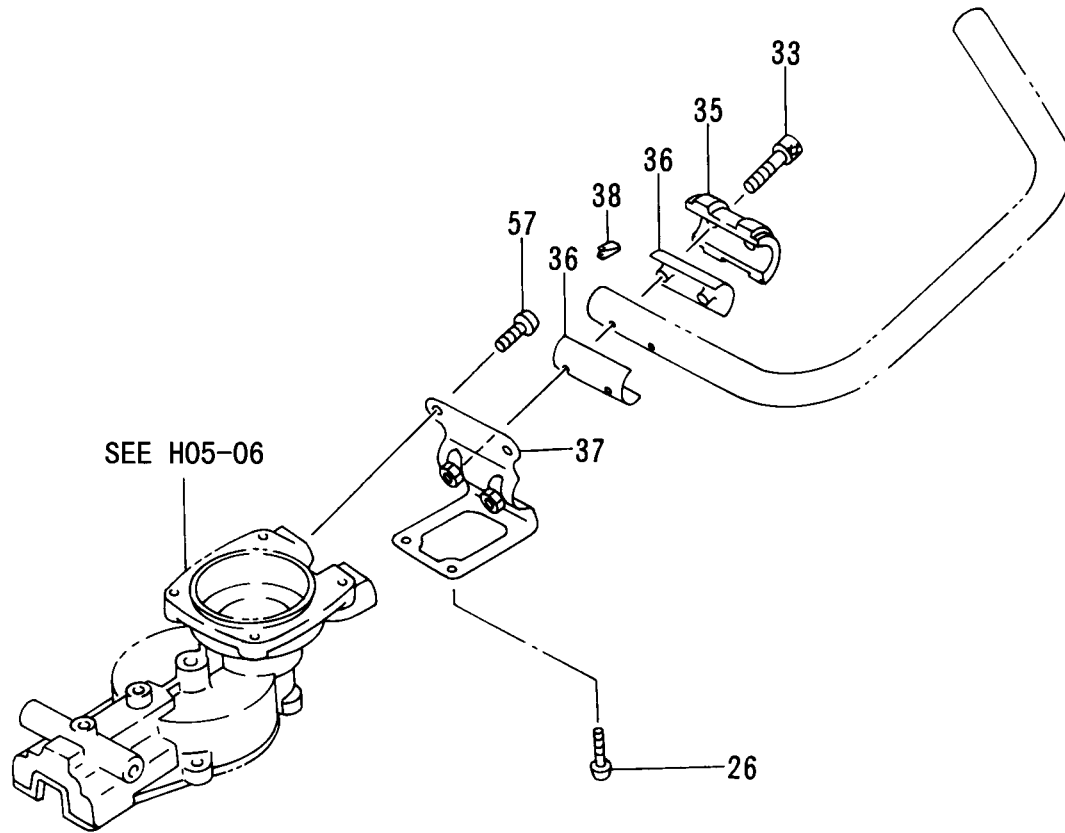

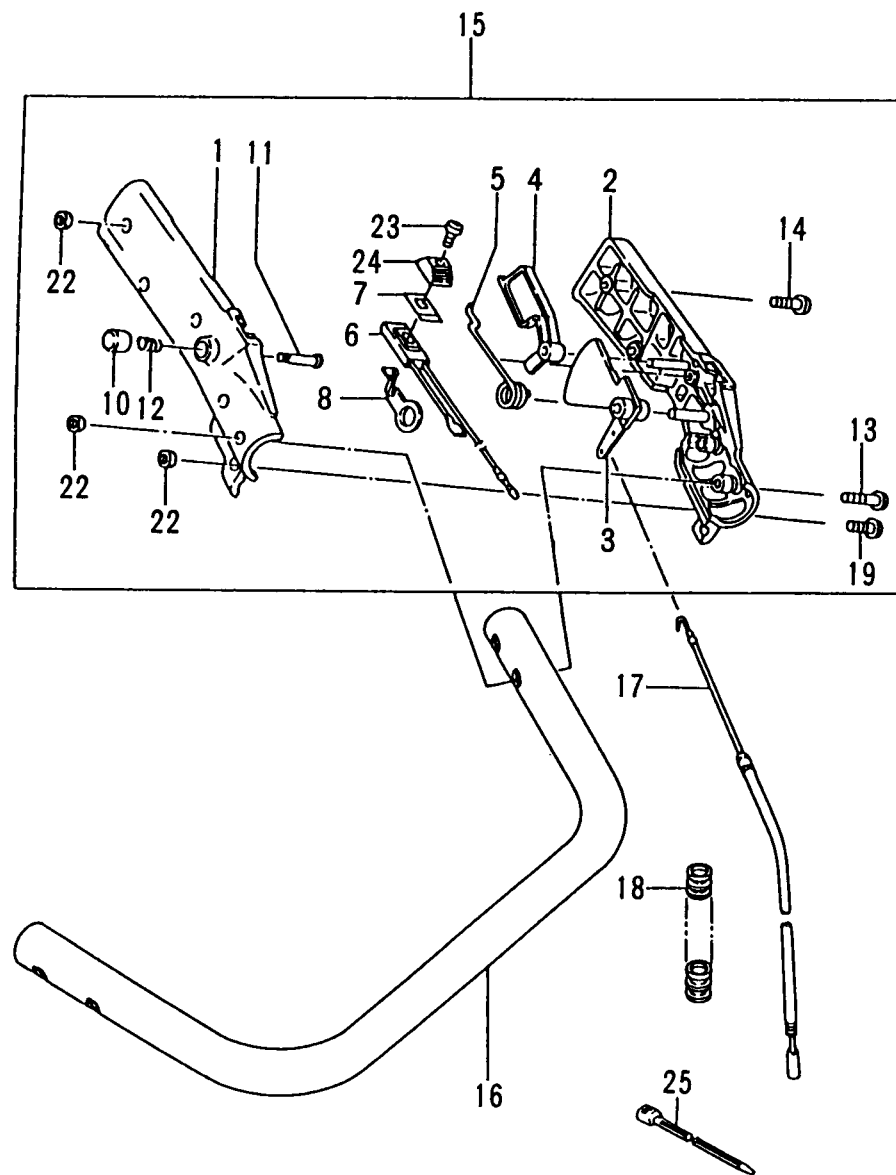

**H05-08****THT-2510 HANDLE**

REF. NUMBER	PARTS NUMBER	Q'TY	SERIAL NUMBER
001	053-33231-22	1	
002	054-33231-22	1	
003	230-33210-20	1	
004	231-33210-20	1	
005	061-32600-20	1	
006	170-33180-80	1	
007	925-32530-20	1	
008	319-37900-20	1	
010	725-32600-20	1	
011	064-33225-20	1	
012	066-32300-20	1	
013	994-16040-301	2	
014	994-16040-251	1	
015	055-33180-91	1	
016	050-33180-80	1	
017	885-0650J-80	1	
018	164-07016-50	1	
019	994-16040-161	3	
022	991-78040-010	6	
023	994-31030-101	1	
024	258-11650-20	1	
025	198-33130-20	1	