



MODEL
UC3SFL

HIKOKI

CHARGER

Item No.	Code No.	Description	No. Used	Remarks
*1	326355	CASE (A).(B) SET	1	
*1A	326355M	CASE (A).(B) SET	1	FOR USA,CAN
*1A	376745	CASE (A).(B) SET	1	FOR AUS,NZL
*2A	337634	CORD	1	FOR USA,CAN
*2A	337635	CORD	1	FOR EUROPE,IND
*2A	337636	CORD	1	FOR AUS,NZL
*2A	326212	CORD (U.K)	1	FOR GBR
*2A	331985	CORD	1	FOR BRA
*2A	329602	CORD	1	FOR CHN
*2A	324743	CORD	1	FOR KOR
3	326361	FUSE (250V-2A)	1	
4	324900	TERMINAL (A)	3	
*5	326359	PRINTED CIRCUIT BOARD ASS'Y 230V	1	INCLUD.3,4
5A	337909	PRINTED CIRCUIT BOARD ASS'Y 120V	1	INCLUD.3,4
6	326358	TAPPING SCREW (W/FLANGE) D3X18	4	
7		NAME PLATE	1	

* ALTERNATIVE PARTS